

TST100 Trip/Odometer settings

[Main Page](#) > [E-Mobility Trackers](#) > [TST100](#) > [TST100 Configuration](#) > **TST100 Trip/Odometer settings**

Trip Settings

Trip Settings

Scenario Settings

Disable	Low Priority
High Priority	Panic Priority

Eventual Records

Disable	Enable
---------	--------

Mode

Continuous	Between Records
------------	-----------------

Start Speed (km/h)

5

Ignition OFF Timeout (s)

60

Send SMS To

SMS Text

Trip

Trip section offers user to configure the *Trip* feature. *Trip* starts when Ignition according to *Ignition source* is ON and also 'Start Speed' is exceeded.

- **Mode** - Here the user can select Odometer distance counter mode.
 - **Continuous** - *Trip* distance is going to be counted continuously (from *Trip* start to *Trip* end) and written to I/O *Trip Odometer* value field. When *Trip* is over and the next *Trip* begins, *Trip Odometer* value is reset to zero.
 - **Between Records** - the distance is going to be counted between every record made. This value is written to I/O *Trip Odometer* value field and is reset to zero every new record until the *Trip* ends. If later all Odometer values are summed up manually, the distance driven during the whole duration of the *Trip* can be obtained.
- **Start Speed** - defines the minimum GPS speed in order to detect *Trip* start.
- **Ignition OFF Timeout** - is the timeout value to detect *Trip* end once the Ignition (configured ignition source) is OFF.



Odometer



- **Calculation Source** - allows to choose Odometer calculation source.
 - GNSS
 - Scooter
- **Odometer Value** - sets the starting total odometer value.