

Template:FM36YX Monitoring

I/O monitoring starts after enabling I/O element and setting up I/O parameters as it is shown below:

System	I/O							
	Property Input	☐ Enabled	Priority	Low Level	High Level	Units	Generate Event	Averaging Constant
Records	Digital input 1	☒	Low ▾	0 ⇅	1 ⇅		Monitoring ▾	10 ⇅
GSM	Digital input 2	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅
DataAcquisitionModes	Digital input 3	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅
Features	Digital input 4	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅
IO	Analog input 1	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	2 ⇅
LVCAN	Digital output 1	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅
	Digital output 2	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅
	GNSS PDOP	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅
	GNSS HDOP	☐	Disab ▾	0 ⇅	0 ⇅		Monitoring ▾	10 ⇅