

Template:FMA2Li Connecting power wires

1. Device should be connected directly to battery. Power supply: 6V/12V/24V.
2. If FMB2YX is used in 6V system and power cables are extended.

Extension cable resistance should be less than 60 m Ω in sum of both, positive and negative, wires.
30 m Ω for single wire.

