

Template:FMA2 GSM settings, GPRS part

GPRS defines main parameters for FM36YX: GSM operator APN and GPRS username and password (optional – depending on the operator), destination server IP and port, and allows to set protocol used for data transfers – TCP or UDP.

Some operators use specific authentication for GPRS session – CHAP or PAP. If any of these is used, APN should be entered as ‘chap:<APN>’ or ‘pap:<APN>’. I.e. if the operator is using APN ‘internet’ with CHAP authentication, it should be entered as ‘chap:internet’. Information about APN and authentication type should be provided by your GSM operator.

System	GPRS data sending Settings	
Records		
GSM		
> GPRS		
> SMS		
> SMS Events		

GPRS Context Activation	Enabled
Protocol	TCP
Always Online	Disabled

APN:	GSM provider APN
APN user name:	
APN password:	
Domain:	127.0.0.1
Target Server Port:	65535