

Template:FMB1 First start card



GNSS/GSM/Bluetooth tracker with internal GNSS/GSM antennas



Contents

- [1 How to insert Micro-SIM card and connect the battery](#)

How to insert Micro-SIM card and connect the battery

1. Gently remove FMB1YX **cover** using **plastic pry tool** from both sides.

Note: To properly open a new case please watch this [video](#).

2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in [Teltonika Configurator](#). Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot. **SIM slot 1** is closer to PCB, **SIM slot 2** is the upper one.
3. Connect **battery** as shown to device. Position the battery in place where it does not obstruct other components.
4. After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **cover** back.

Device is ready to be installed.



- Micro-SIM card insertion/removal must be performed when device is powered off -**
- external voltage and internal battery disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**