https://wiki.teltonika-gps.com/view/Template:FMB2_First_start_card

Template:FMB2 First start card

×

FMB20X Small and professional waterproof tracker with high gain internal GNSS/GSM antennas, Bluetooth and high capacity internal Ni-MH battery

×

Contents

- <u>1 How to insert Micro-SIM card</u>
- <u>2 Cable colors</u>

How to insert Micro-SIM card

- 1. Unscrew 6 screws counter-clockwise that are located on the bottom of the device.
- 2. Remove the **cover**.
- 3. Insert **Micro-SIM** card as shown with **PIN request disabled** or read <u>Security info</u> how to enter it later in **Configurator**. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
- 4. Connect battery as shown to device.
- 5. After configuration, attach device **cover** and put the **screws** back in.
- 6. Device is ready to be connected.



Micro-SIM card insertion/removal must be performed when device is powered off external voltage and battery are disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.

Cable colors

PIN NUMBER	PIN NAME	DESCRIPTION
Red	VCC (6-30)V DC (+)	Power supply (+630 V DC).
Black	GND (-)	Ground.
Yellow	DIN 1	Digital input, channel 1.
White/Green	DIN 2	Digital input, channel 2.
White	DIN 3	Digital input, channel 3.
Grey	AIN 1	Analog input, channel 1. Input range: 0-30 V DC.
White/Orange	DOUT 1	Digital output, channel 1. Open collector output. Max. 3,3 A DC.
Violet	DOUT 2	Digital output, channel 2. Open collector output. Max. 3,3 A DC.
Green	1WIRE DATA	Data channel for 1-Wire devices.
Blue	1WIRE POWER	+3,8 V output for 1-Wire devices.