

Template:FMB640 Manual Geofence settings

Frame Border Size (meters) setting defines Manual Geofence border size in meters.

Geozones Overspeeding DOUT setting defines DOUT control in **Manual Geofence Zones** overspeeding scenario, which also can be configured in **Manual Geofence Zones** TAB.

DOUT ON Duration (ms) defines value in milliseconds for how long DOUT should be active.

DOUT OFF Duration (ms) defines value in milliseconds for how long DOUT should be inactive.

Security	Set keyword
System	
GPRS	Keyword
Data Acquisition	
SMS \ Call Settings	
SMS Events	
GSM Operators	
Features	
Accelerometer Features	
Auto Geofence	
Manual Geofence Settings	
Manual Geofence Zones	
Trip \ Odometer	
Bluetooth	
iButton List	
I/O	
LVCAN	
FMS IO	
Manual CAN IO	
Tachograph Data	
RS232 \ RS485	
CAN \ Tachograph	