

[https://wiki.teltonika-gps.com/view/Template:FMB964\\_Supply\\_voltage](https://wiki.teltonika-gps.com/view/Template:FMB964_Supply_voltage)

## Template:FMB964 Supply voltage

Description	Voltage	Duration
<b>Normal operation</b>	+6... +30 V	Unlimited
<b>Protection turns on, device turns off</b>	34 V	Unlimited
<b>Maximum voltage</b>	< 70 V	Unlimited
<b>Maximum voltage impulse</b>	90 V	5 ms