

Template:FMB I/O settings

□

Contents

- [1 Input Name](#)
- [2 Current Value](#)
- [3 Units](#)
- [4 Priority](#)
 - [4.1 None Priority](#)
 - [4.2 Low Priority](#)
 - [4.3 High Priority](#)
 - [4.4 Panic Priority](#)
- [5 High and Low Level](#)
- [6 Event Only](#)
- [7 Operands](#)
 - [7.1 Operand On Exit](#)
 - [7.2 Operand On Entrance](#)
 - [7.3 Operand On Both](#)
 - [7.4 Operand Monitoring](#)
 - [7.5 Operand On Hysteresis](#)
 - [7.6 Operand On Change](#)
 - [7.7 Operand On Delta Change](#)
- [8 Avg Const](#)
 - [8.1 For Digital Inputs:](#)
 - [8.2 For Analog Inputs:](#)
- [9 Send SMS To](#)
- [10 SMS Text](#)

When no I/O element is enabled, AVL packet comes with GNSS information only. After enabling I/O element(s) AVL packet contains current value(s) of enabled I/O element(s) along with GNSS information.

Input Name

I/O element name.

Current Value

If device is connected to **Configurator** all current I/O values are displayed in this column. Also I/O current values can be seen in [Status→I/O Info](#) tab.

Units

Units of measurement.

Priority

This field allows to enable I/O elements and setting them a priority so they are added to the data packet, which is sent to the server. By default **12 I/O elements** with **Low priority** are enabled: Ignition, Movement, Data Mode, GSM Signal, Sleep Mode, GNSS Status, GNSS PDOP, GNSS HDOP, External Voltage, Speed, Battery Current, Battery Voltage. All records made by FMB1YX are regular, and regular packets are sent as low priority records.

Priority level (AVL packet priority) can be:

None Priority

Module doesn't make additional record.

Low Priority

Module makes an additional record with an indication that the **event was caused by an I/O element change** (depending on [Operands](#) configuration).

High Priority

Module makes an additional record with High priority flag and **sends event packet immediately** to the server using **GPRS**.

Panic Priority

This priority triggers same actions as **High priority**, but if GPRS fails, it sends an AVL packet using **SMS data** if SMS data sending is enabled and the number is provided in [SMS/Call Settings](#).

High and Low Level

These levels define I/O value range. If I/O value **enters or exits** this range, FMB1YX **generates an event**.

Event Only

When this is selected, I/O element status value will be **appended only to eventual records**, otherwise I/O element status value will appear in each AVL record.

Operands

Defines when to generate event: [On Exit](#), [On Entrance](#), [On Both](#), [Monitoring](#), [On Hysteresis](#), [On Change](#) or [On Delta Change](#).

Operand On Exit

Record is generated when input value leaves a range between low and high level limits.



Operand On Entrance

Record is generated when input value enters a range between low and high level limits.



Operand On Both

Record is generated by both *On Exit* and *On Entrance* operands' logic at same time.



Operand Monitoring

No event at all. Values are recorded only when other triggers worked.



Operand On Hysteresis

Record is generated when input value crosses the high limit value from below the low limit value or vice versa.



Operand On Change

Record is generated when input value changes.



Operand On Delta Change

Record is generated when input value changes and the absolute change becomes equal to or higher than the limit value.



Avg Const

This parameter defines how long a new value must persist to be recognized as a change.

For Digital Inputs:

If *Avg Const* value is 10, new value must be present for 1 second to register the change to a new value. Internal sampling is done every 40 ms, so 25 samples are taken per second. To configure 5 seconds of averaging multiply 10 by 5 yielding 50 as *Avg Const* value. The same logic works if the device is in [Deep Sleep mode](#).

For Analog Inputs:

Averaging follows RC exponential curve, see image below:



NOTE: Average Constant is not used as an activation timer or delay timer. It prevents quick, noisy value changes from triggering events.

Event is generated at different times due to variations in voltage. Average constant is designed to filter jumps instead of event generation time.

For example: generation is set to happen at 14500mV, and actual voltage is set to 15000mV, that record will be generated earlier than 10s with avg const set to 100. This is because avg const is calculating time it takes for device to get to actual voltage (in this case 15000 mV), while device will be generating records when it hits 14500mV.

Send SMS To

Sends SMS notification about event to selected number from [SMS/Call Settings](#) **GSM Predefined Numbers** list if event priority is set to [Low](#), [High](#) or [Panic](#).

SMS Text

The SMS Text field can be altered and any text can be entered. Maximum message length is **160** symbols (numbers, letters and symbols in ASCII, except for comma “,”).

SMS Event Text may be either in default or composed format.

Default format:

Date, time, longitude, latitude, 'SMS text', value

Example:

2018/11/02 12:00:00 Lon:0.000000 Lat:0.000000 Alarm 1

Composed format:

Composed format may consist of text and defined commands which start with % symbol.

Supported commands:

Command	Description
imei	IMEI
fw	Firmware version
fullfw	Full firmware version
modem	Modem firmware version
gnss	GPS firmware version
vin	OBD VIN number
lat	Latitude (non-float value)
lon	Longitude (non-float value)
sat	Satellites in use
time	Timestamp
din1	Digital Input 1
din2	Digital Input 2
din3	Digital Input 3
ain1	Analog Input 1
out1	Digital Output 1
out2	Digital Output 2
pdp	PDOP
hdp	HDOP
exv	External Voltage
gmap	Google Maps link
mov	Movement
odo	Trip Odometer
op	GSM operator
spd	Speed
ib	iButton
mod	Data Mode
sig	GSM signal
slp	Sleep Mode
cel	Cell ID
lac	Area Code
tmp	Dallas Temperature 1
mac	BT MAC address
dtc	OBD fault codes
flat	Latitude (float value)
flon	Longitude (float value)

date Date in yyyy/mm/dd format
datetime Time in hh:mm:ss format
val Eventual IO value
io'par_id' Element value by parameter ID

Command	Description
imei	IMEI
fw	Firmware version
fullfw	Full firmware version
modem	Modem firmware version
gnss	GPS firmware version
lat	Latitude (non-float value)
lon	Longitude (non-float value)
sat	Satellites in use
time	Timestamp
pdp	PDOP
hdp	HDOP
mov	Movement
op	GSM operator
spd	Speed
sig	GSM signal
slp	Sleep Mode
cel	Cell ID
lac	Area Code
datetime	time in hh:mm:ss format
val	Eventual IO value
io'par_id'	Element value by parameter ID
gmap	Google Maps link

Composed text example:

%imei Movement %io50010

Event SMS text:

352094082828606 Movement 1

If FMB1YX is in [Deep Sleep](#) or [Ultra Deep Sleep](#) mode and an SMS event occurs with [Low priority](#) (which does not wake up FMB1YX), then the device does not send the message. It is saved to device memory until it wakes up from [Deep Sleep](#) or [Ultra Deep Sleep](#) mode and GSM modem starts working normally. After it wakes up, all the messages that are saved to memory will be sent, but keep in mind that only 10 messages can be saved to memory - all other messages will not be saved, until there is free memory space.

