

Template:FMB Security info

In security section user can see SIM card and configurator keyword security information.

- The state and status of the currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with a PIN code is used, the user can enter it in this section. The remaining attempts to enter the PIN code are shown as well.
- When the SIM PIN code is entered correctly, the user can change the PIN code or disable it from the SIM card. When the SIM PIN is disabled and the user would like to enable it again, previously used pin code must be entered.
- If two SIM cards are inserted into the device, the user can change the PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB configurator web interface. The top navigation bar includes the Teltonika logo and a series of action buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. On the right, a status bar shows the IMEI, firmware version (FW 03.25.15 Rev: 1.0), and configuration version (6.1.17.0).

The left sidebar contains a menu with the following items: Status, Security (highlighted), System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II.

The main content area is titled 'Device Info' and displays various system parameters:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.

Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	3506030600001303	00:00:47	Not Charging 0%

Below the 'Device Info' section, there are tabs for 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' tab is active, showing 'GNSS Status' and 'Satellites'.

GNSS Status

Module Status	GNSS Packets
ON	32

Fix Status: No fix
Fix Time: 00:00:00

Satellites

Visible:		In Use:	
GPS	GLONASS	GPS	GLONASS
4	0	0	0
BeiDou	Galileo	BeiDou	Galileo
0	0	0	0
Total In View: 4		Total In Use: 0	

Location

Latitude/Longitude	Altitude	HDOP
0, 0	0	0

Speed	Angle	PDOP
0 km/h	0°	0

The bottom of the interface features a social media bar with icons for Facebook, YouTube, Twitter, and LinkedIn, along with a settings gear icon.

*Please note that This feature will only show up in configurator when device is connected to a computer.