

Template:FMM0 First start card



Advanced Plug and Track real-time tracking terminal with GNSS, GSM and Bluetooth connectivity



Contents


- [1 How to insert Micro-SIM card and connect battery](#)

How to insert Micro-SIM card and connect battery

1. Gently remove FMM001 **cover** using **plastic pry tool** from both sides.
2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in **Configurator**. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Connect battery as shown to device. Position the battery in place where it does **not obstruct other components**.
4. Attach device **cover** back.

Device is ready to be connected.



 **Micro-SIM card insertion/removal must be performed when device is powered off - external voltage and battery are disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**