

Template:FMM130 manual supported frequency bands table

Product code	Region (operator)	Module name	Supported bands
FMM130 6V****	World Wide market	Quectel BG96	4G (LTE-FDD) (CAT M1): B1 (2100 MHz), B2 (1900 MHz), B3 (1800 MHz), B4 (1700 MHz), B5 (850 MHz), B8 (900 MHz), B12 (700 MHz), B13 (700 MHz), B18 (850 MHz), B19 (800 MHz), B20 (800 MHz), B28 (700 MHz) 4G (LTE-TDD): B39 (1900 MHz) (for CAT-M1 only) 2G: B2 (1900 MHz), B3 (1800 MHz), B5 (850 MHz), B8 (900 MHz)
FMM130 LN****	World Wide market	Quectel BG95-M3	4G (LTE-FDD) (CAT M1): B1 (2100 MHz), B2 (1900 MHz), B3 (1800 MHz), B4 (1700 MHz), B5 (850 MHz), B8 (900 MHz), B12 (700 MHz), B13 (700 MHz), B18 (850 MHz), B19 (800 MHz), B20 (800 MHz), B25 (1900 MHz), B26 (850 MHz), B27 (850 MHz), B28 (700 MHz), B66 (1700 MHz), B85 (700 MHz) 4G (LTE-FDD) (CAT NB2): B1 (2100 MHz), B2 (1900 MHz), B3 (1800 MHz), B4 (1700 MHz), B5 (850 MHz), B8 (900 MHz), B12 (700 MHz), B13 (700 MHz), B18 (850 MHz), B19 (800 MHz), B20 (800 MHz), B25 (1900 MHz), B28 (700 MHz), B66 (1700 MHz), B71 (600 MHz), B85 (700 MHz) 2G: B2 (1900 MHz), B3 (1800 MHz), B5 (850 MHz), B8 (900 MHz)