

# Template:FMX13A First start card withoutSD

## How to insert Micro-SIM card and connect the battery


1. Gently remove FMM125 **cover** using **plastic pry tool** from both sides.

**Note:** To properly open a new case please watch this [video](#).

2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in [Teltonika Configurator](#). Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Connect **battery** as shown to device. Position the battery in place where it does not obstruct other components.
4. After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **cover** back.



**Micro-SIM card insertion/removal must be performed when device is powered off -**

-  **external voltage and internal battery disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**