Template:I/O events

FM36YX sends SMS event message when a configured I/O property enters and/or exits its configured High/Low boundaries or Hysteresis event generation is chosen (Monitoring does not generate event, so SMS event could not be configured).



Every IO element SMS event can be configured to send individual message to different numbers.

