

TFT100 System settings

[Main Page](#) > [E-Mobility Trackers](#) > [TFT100](#) > [TFT100 Configuration](#) > **TFT100 System settings**



Contents

- [1 System Settings](#)
 - [1.1 Movement Source](#)
 - [1.2 Speed source](#)
 - [1.3 Records settings](#)
 - [1.4 PDOP filter](#)
 - [1.5 Input/Output Mode](#)
 - [1.6 LED Indication](#)
 - [1.7 GNSS Source settings](#)
 - [1.8 Battery Charge Mode](#)
 - [1.9 Analog Input Value Range](#)
 - [1.10 DOUT Overcurrent protection](#)
 - [1.11 Data Protocol](#)
- [2 Static Navigation Settings](#)
- [3 Sleep Mode](#)
 - [3.1 BT/BLE module OFF during Sleep modes](#)
- [4 Ignition Source](#)
- [5 Movement Settings](#)
- [6 Time Synchronization](#)
- [7 Accelerometer auto calibration](#)
 - [7.1 Mounting Guidelines](#)
 - [7.2 Accelerometer delay](#)
- [8 Timestamp Backup](#)

System Settings

Movement Source

User can select which source will be used to determine when vehicle is on stop or moving. When multiple are selected, if any of selected are active, Vehicle MOVING mode is used. Available movement source:



- Ignition: checks ignition settings which depends on Ignition Source settings;
- GNSS: movement detected if Fix position available and speed is bigger or equal to 5km/h;
- Accelerometer: movement detection depends on Accelerometer Delay Settings;
- CAN Speed: movement is detected if CAN speed retrieved from specific CAN protocol.

When multiple source are selected, if any of selected are active, Movement is detected.

Speed source

If TFT100 is used with CAN modification extra settings option will be available for choosing Speed source.

Available speed source: GNSS or CAN.

If CAN Speed source enabled, it will retrieve speed from CAN data, but if the speed value from CAN data is 0, speed will be retrieved from GNSS data if Position Fix acquired, even though it is not configured.



Records settings

Here user can enable or disable records when GPS is not available (no GPS fix).

- **After Position Fix** - Device must have GPS fix and time to save/send records.
- **After Time Sync** - Device must have correct time to save/send records. Allows record sending with no coordinates.
- **Always** - Always save/send records. Allows record sending with no coordinates and no correct time.

PDOP filter

User can choose to enable or disable the PDOP filter. This feature allows to discard GNSS module output data if PDOP (Position Dilution of Precision) value is above selected threshold.

- **PDOP filter threshold** - PDOP filter threshold value can be entered from which the parameters will be filtered.

Input/Output Mode

User can choose specific external pins to work as an input or as output. Possible valid input/output configurations:

- Digital input 3 and Digital input 4 (value:5),
- Digital output 1 and Digital input 4 (value:6),
- Digital input 3 and Digital output 2 (value:9),
- Digital output 1 and Digital output 2 (value:10).

LED Indication

User can turn on or off the indication LEDs.

GNSS Source settings

User can configure which GNSS system(s) to use.

User has a choice to use only one system between GPS, GLONASS, Galileo or BeiDou and it is possible to choose two or three systems together. One exception is that you cannot combine BeiDou and GLONASS systems together.

Examples of non-configurable GNSS source combinations are:

- GLONASS + BeiDou;
- Galileo + GLONASS + BeiDou;
- GPS + GLONASS + BeiDou;
- GPS + Galileo + GLONASS + BeiDou.

List of configurable GNSS sources:

- GPS only;
- GPS + BeiDou;
- GPS + GLONASS;
- GPS + GLONASS + Galileo.

Battery Charge Mode

Here user can change battery charger settings, where charging is allowed. Battery will be charged: **On Need** (battery will be charged anytime when it needs to be charged) and **After Ignition ON** (battery will be charged only when ignition is on).

Three charging modes is available:

- On need: charger enabled if external voltage is higher than 5.05 voltage and Battery Voltage is below 3.90V. Charging is disabled if device enters any sleep mode.
- After Ignition On: charger enabled after ignition is turned on, except if the battery is fully charged or 10-minute timeout has not passed since the device was turned on for faster FIX receiving.
- Always: charger is always enabled, except if the battery is fully charged or 10-minute timeout has not passed since the device was turned on for faster FIX receiving.



Analog Input Value Range

User can choose analog input range of 15 V or 150 V.

Input range used to determine lowest voltage for DIN1 and DIN2 activation.



Lowest voltage to enabled DIN for 15V range - 2.5V

Lowest voltage to enabled DIN for 150V range - 9V

DOUT Overcurrent protection

DOUTs have overcurrent protection that triggers after the current exceeds 300 mA. This protection works by generating pulses on the hardware. When the firmware detects at least 20 impulses on a DOUT it turns off that DOUT for 5 minutes. During this time all scenarios that try to turn this DOUT on will fail.

Data Protocol

User can choose which protocol version to use for data sending to server.

- Codec 8 supports up to 255 AVL ID;
- Codec 8 Extended supports up and above 255 AVL ID.

Static Navigation Settings



Static Navigation mode is a filter, which filters out track jumps when the object is stationary. If static navigation filter is disabled, it will apply no changes to GPS data. If static navigation filter is enabled, it will filter changes in GPS position if no movement (as defined by configured movement source) or ignition (as defined by configured ignition source) is detected. It allows filtering GPS jumps when the object is parked (not moving) and GPS position is still traced.

Additionally, user can choose which source (movement or ignition) is used to activate/deactivate static navigation.

Sleep Mode

User can choose sleep mode. More about sleep modes can be found [here](#).

Sleep Mode

Sleep Settings

Disable	GPS Sleep
Deep Sleep	Online Deep Sleep
Ultra Sleep	

Timeout (min)

1

BT/BLE module OFF during Sleep modes

Power off sleep mode can be described as the lowest possible power consumption mode where the device can go into power off state.

From the version, 03.28.XX this new functionality includes new parameters:

- **Periodic Wakeup** - if value is greater than zero, device while being in Deep Sleep or Online Deep Sleep, will wake up after defined period for beacon collection. This is mainly should be used when Bluetooth is disabled in sleep.
- **Bluetooth On While In Sleep**- by default this parameter value is set to Enable and BT will work as in base functionality. If this value is set to Disable, Bluetooth will be turned off when device goes to Deep Sleep or Online Deep Sleep and will be turned on during Periodic Wakeup or if device enters normal state.

Sleep Mode ⓘ

Sleep Settings

Disable	GPS Sleep
Deep Sleep	Online Deep Sleep
Ultra Sleep	

Timeout (min) 1440

Periodic Wakeup (min) 0

Bluetooth On While In Sleep

Disable	Enable
---------	--------

Note: In case when during scan after wakeup no BLE devices will be found FMB will be active for configured scan duration time in Bluetooth 4.0 tab. After that timeout FMB will go to sleep state.

Power off sleep mode can be described as the lowest possible power consumption mode where the device can go into power off state and can only wake up if one of the conditions is true:

- Movement is detected by accelerometer (not by the configured movement source);
- External power is applied;
- It is the time to make a new periodic record (new feature);

Please keep a note that Power OFF Sleep will not work if any USB cable is connected to the device.

Ignition Source

Ignition Source

High Voltage (mV)

Low Voltage (mV)

Ignition Settings

DIN 1	Accelerometer
Power Voltage	DIN 3
DIN 4	

User can choose an ignition source from digital input (1, 2 or 3), power voltage, CAN and accelerometer. More than one ignition source can be selected at the same moment. When there are 2 or more sources selected, at least one condition has to be met to change Ignition status. Example: DIN1 and Accelerometer are selected as Ignition source. When the device detects movement, Ignition status will change to 1, regardless that DIN1 value is 0. User can select movement start and movement stop delay time - those parameters are used when accelerometer is selected as an ignition source. Ignition status is used in power management and the following functionalities: Eco/Green driving, Excessive idling, Over speeding, Towing detection and trip.

Movement Settings

Movement settings

Movement Start Delay (s)

Movement Stop Delay (s)

Accelerometer Sensitivity in Sleep

Here the user can set the movement start/stop delays.

For example, if the **Movement Start Delay** is set to 1s and **Movement Stop Delay** to 60s, the movement will be detected after 1s of moving and defined as stopped after 60s when device stopped moving. Accelerometer Sensitivity in Sleep parameter defines how much movement device needs to experience to exit sleep mode. The lower the sensitivity - the more movement is required.

- Minimal - approximately 40% higher movement threshold comparing to Normal
- Reduced - approximately 20% higher movement threshold comparing to Normal
- Normal - recommended value for most users
- Increased - approximately 20% lower movement threshold comparing to Normal
- Maximum - approximately 40% lower movement threshold comparing to Normal

Changing Accelerometer Sensitivity in Sleep parameter might result in fake movement record or skipped movement events! Only change that if you experience problems with movement detection!

Time Synchronization

✖ User can select which NTP server (it is possible to configure up to two servers) and what time period to use to re-synchronize time. Configurable NTP server (it is possible to configure up to two servers) and what time period to use to re-synchronize time.

Parameter ID	Name	Value/Type	Min	Max	Default
901	NTP Resync (hours)	uint8	0	24	0
902	NTP Server 1	char	0	55	avl1.teltonika.lt
903	NTP Server 2	char	0	55	pool.ntp.org

Time synchronization works by waiting a minute on startup to acquire fix and consequently synchronizes the time via GNSS. If the firmware acquires the fix, it starts working in the syncing by GNSS state. This state checks the difference of RTC and GNSS times every second. If the difference of at least 3 seconds persists to be for 5 seconds, the firmware triggers a procedure by GNSS. After that, the time difference is still calculated, but the difference is expected to persist for at least 5 minutes to trigger a GNSS time resynchronization. This is done to prevent false GNSS timestamps (such as year 2080 and etc.). If there's no time difference found, the difference is expected to persist again for a period of 5 seconds later on when calculating. In the case that there is no fix or it is lost during the syncing by GNSS state, the firmware goes to state of syncing by NTP.

Entering the state of NTP syncing, the firmware immediately attempts to synchronize the time by triggering NTP and later on, does this periodically every time the configured NTP resynchronization time is reached. If the NTP resynchronization time is set to 0, no periodical resynchronization is done in this state. Time synchronization by NITZ can occur any time.

✖

Accelerometer auto calibration

✖

User can disable or enable Accelerometer Auto Calibration and Gravity Filter features. Under Accelerometer Auto Calibration settings, user can choose:

- **Disable** - do not use auto calibration feature (sends AXES raw data),
- **Once** - calibrate one time only,
- **Continuous** - launch auto calibration every trip (note: trip function must be enabled!).

Important! If Auto calibration is disabled, device should be mounted according User manual for Eco/Green driving feature to work properly. If enabled, AXES will be reoriented to VEHICLE axes according User manual (+X - Forward, +Y - Left, +Z - Down).


Under Gravity Filter settings, user can choose:

- **Disabled** - do not remove GRAVITY component from AXL/Crash data,
- **Enabled** - remove GRAVITY component from AXL/Crash.

(An in-depth explanation for the auto calibration can be found [here](#))

Calibration algorithm is used to recalculate accelerometer axes to represent vehicle's axes (see Picture below). Vehicles axes are as follows:

- X is front.
- Y is left.
- Z is down.

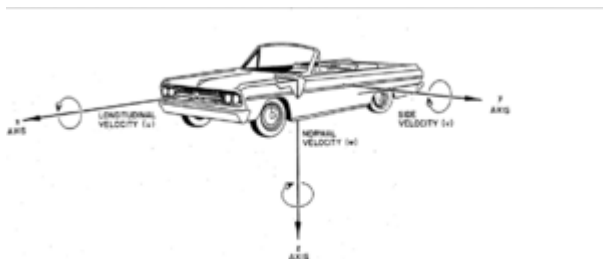

Once vehicle's axes are calculated, device is considered calibrated. **Note:** Moving forward along any

axis will generate negative values. This means acceleration will generate -X values, accordingly braking will generate X values. Same goes for other axes.

Commands that can be used during calibration: {

Mounting Guidelines

The device should be mounted according to the picture below. Logo/Antenna must be facing up.



Accelerometer delay

Configurable movement start/stop delay settings.



{

Timestamp Backup



Enables or disables the Timestamp Backup synchronization.

This feature, if enabled, every minute saves current timestamp to non-volatile memory (persist after power cutoff). If device was restarted for some reason and was unable to synchronize time, device will use the last saved timestamp as current time.