

FMB930 Features settings



Contents

- [1 Eco/Green Driving](#)
 - [1.1 Data output](#)
 - [1.2 Auto calibration](#)
- [2 Over Speeding](#)
- [3 Network Jamming](#)
- [4 DOUT Control Via Call](#)
- [5 Immobilizer](#)
- [6 GNSS Fuel Counter](#)
- [7 DOUT Control Via Ignition](#)
- [8 Ignition ON Counter](#)
- [9 DOUT 1 Output Type](#)

Eco/Green Driving



When vehicle parameters exceed the values of *Max Acceleration*, *Max Braking* or *Max Cornering* parameters, the scenario is activated: a record is generated. You can configure all three parameters in m/s² units. The scenario is activated until the current Acceleration, Braking, or Cornering value decreases below the set parameter value.

Parameters used with *Eco/Green Driving* functionality are given in a table below.

Parameter name	Description
Scenario Settings	Enable/Disable Green driving functionality
Max Acceleration	Value which can be reached while accelerating without triggering harsh acceleration event.
Max Braking Acceleration	Value which can be reached while braking without triggering harsh braking event.
Max Cornering Acceleration	Value which can be reached while cornering without triggering harsh cornering event.
Source	Which source (GPS or accelerometer) data will be collected from.
Eco/Green Driving Duration	If enabled, additional record with Eco/Green Driving event duration (ms) will be saved and send to server. When GPS is selected as the data source duration accuracy will be in seconds.
Output Control	Which FMB930 Digital Output will be used for accessory (buzzer, LED and etc.) activation/deactivation.

Data output

Data from accelerometer/GPS are continuously monitored and processed and are used to decide whether a harsh event has occurred. If either of three cases is satisfied, an event is generated and a record is saved and sent to the server ([FMB930](#) must be properly configured in order to send the record). Event value is multiplied by 100 before sending/saving records to get more precision when displaying data.

Auto calibration

The auto-calibration process is as follows:

1. The vehicle is stopped.
2. There is a straight road ahead.
3. Send SMS "*auto_calibrate:set*" to the FMB device.
4. Accelerate to >30 km/h for 5 sec.
5. FMB will send a response when calibration is completed successfully.

Calibration is saved to internal flash memory, which means it will stay after a reset. To check auto-calibration status send a following short text message to the FMB device: "*auto_calibrate:get*".

Over Speeding



When vehicle speed exceeds configured maximum speed value the scenario is activated, and an event record is generated and digital output status is changed to 1 when configured.

Detected speed has to be greater than configured max speed +3% of configured max speed for the overspeeding event to start. To stop overspeeding event detected speed has to be lower than configured max speed -3% of configured max speed. Configurable parameters:

- Scenario settings - defines the priority of overspeeding scenario: 0 - disabled, 1 - low, 2 - high, 3 - panic.
- Max speed - it is the maximum allowed speed that can be reached. If the speed exceeded configured value, then the event will occur.
- Send SMS to - the GSM number to which the SMS event will be sent.
- SMS text - SMS text.

Network Jamming



When a device detects GSM signal jamming, it activates the Jamming scenario. The device then

starts a configurable timeout before responding that is intended to reduce false positives. After the timeout ends, the device generates an event record

Note that this scenario will not work with [Deep Sleep mode](#), [Ultra Deep Sleep](#) and [Online Deep Sleep](#) modes, since they disable the device's GSM module to save power.

Eventual Records parameter can be configured: when it is disabled scenario status value will appear in each AVL record, otherwise, it will be appended only to eventual records.

For a more visual explanation, take a look at the video made by Teltonika explaining the use-case of Jamming Detection: [Teltonika Jamming Detection scenario](#)

DOUT Control Via Call



The scenario is activated and digital output is ON when a call is received from a number that is on the authorized numbers list.

Call control functionality is the following:

- When [FMB930](#) is configured to control DOUT1/DOUT2 the device waits for an incoming call from a configured secure number. If a call is received [FMB930](#) turns on DOUT1/DOUT2 for a user defined *Duration Timeout*. If duration timeout set to "0" DOUT1/DOUT2 will be OFF.
- DOUT1/DOUT2 can be turned off by *Duration Timeout* or by digital input 1, digital input 2 or digital input 3.
- DOUT1/DOUT2 will always be ON if, for example, DOUT deactivation is set to DIN1, but DIN1 will be never turned ON, or when duration timeout is set to the maximum value (2147483647) which is about 68 years.

Immobilizer



From the firmware version [03.25.14](#) Beacon authentication was introduced. Beacon authentication works in the same way as iButton authentication. To use authorized Beacons, the Beacon list should be filled in the device configurator. Instructions how to list Beacons in FMB devices can be found [here](#).

By using Beacon authorization, the immobilizer feature can be used with devices that don't have a 1-wire data connection available.

If *DOUT Control* is disabled, the scenario will only generate events without digital output activation. If *DOUT Control* is enabled DOUT1/DOUT2 turns ON if ignition turns ON (*Ignition Source* is configured to 1). After any Beacon ID is attached, DOUT1/DOUT2 turns OFF. After Beacon identification configured *Ignition Source* can be turned OFF (*Ignition Source* is configured to 0) for no longer than 30 seconds, otherwise, the immobilizer must be repeated. If the *List Check for Authorization* parameter is enabled, the authorization will be successful only if the attached Beacon is specified in the Beacon list.

The ignition off timeout parameter is used to set the duration after which authorization is activated when the ignition is turned off. For example, if the Ignition off timeout is set to 30 seconds when the driver turns the ignition off, he has 30 seconds until the immobilizer security check turns on again. In other words, if the driver turns off the ignition and turns it back on in less than 30 seconds, then he will not have to make an identification with the Beacon again.

GNSS Fuel Counter

GNSS Fuel Counter	
City Consumption (L/100km)	<input type="text" value="0"/>
Highway Consumption (L/100km)	<input type="text" value="0"/>
Average Consumption (L/100km)	<input type="text" value="0"/>
City Speed (km/h)	<input type="text" value="30"/>
Highway Speed (km/h)	<input type="text" value="90"/>
Average Speed (km/h)	<input type="text" value="60"/>
Correction Coefficient	<input type="text" value="1"/>
Fuel Consumption On Idling (L/h)	<input type="text" value="1"/>
Higher Speeds Add (%)	<input type="text" value="20"/>
Highway Consumption Every (km/h)	<input type="text" value="50"/>

To configure *Fuel Counter* parameters use fuel consumption norms which are presented in the technical documentation of the vehicle. By default speeds for these fuel consumption norms are: City - 30 km/h, Average - 60 km/h, Highway - 90 km/h. These values can be changed.

When speed is higher than the highway fuel consumption speed, x% of highway fuel consumption is added every extra y km/h, by default [FMB1YX](#) adds 20% every 50 km/h of extra speed. For example, the fuel consumption is $(1.2 * (\text{Highway Fuel Consumption}))$ at 140 km/h and $(1.4 * (\text{Highway Fuel Consumption}))$ at 190 km/h.

Correction coefficient is used to correct every value of fuel consumption which is sent to the server through an expression of $((\text{Used Fuel}) * \text{Correction coefficient})$. By default, it is 1, with minimum and maximum values of accordingly 0.01 and 2. For example, when the correction coefficient is 1 and [FMB930](#) calculates that the amount of used fuel over 35 m distance is 20 ml, the value of 20 ml will be sent to the server, and if correction coefficient is 1.2, the value of $20 * 1.2 = 24$ ml will be sent to the server.

Fuel Consumption on Idling is used to calculate fuel consumption when the ignition is on, but the vehicle is stationary. The consumption value is 1 l/h by default, with a minimum and maximum of accordingly 0 and 5 l/h. This parameter is less than 1.0 l/h for almost all diesel cars and is equal to about 1.5 - 2.0 l/h for gasoline cars.

DOUT Control Via Ignition



This feature allows direct control of DOUT by configured ignition source status. When enabled, the function will start to monitor ignition status, and once the ignition changes state from On to Off after configured Ignition Off a timeout, selected DOUT (Digital Output) will be turned On.

Turning DOUT Off is possible with enough voltage applied to the configured DIN (Digital Input) or by turning on the ignition. Voltage requirements: DIN1 - 7.5V, DIN2-4 - 2.5V.

Parameter name	Description
DOUT Control	Scenario controls configured DOUT if ignition timeout exceeds its limit
DOUT Deactivation Via DIN	DOUT is turned off if configured DIN is in on (voltage applied) state
Ignition Off timeout	Duration (in seconds) after which DOUT is turned on, when ignition is turned off

Ignition ON Counter

Ignition On Counter

Ignition On Counter

Disable

Enable

Ignition On Counter Value (s)

Ignition ON Counter scenario counts the time spent with the ignition in the resolution of seconds. It is possible to configure a starting value of the counter. Maximum value: **2147483647** seconds or 596523.235 hours **NOTE THAT**, when entering a starting value, the value must be in seconds!

Example of Ignition On Counter **I/O** element:

Ignition On Counter	0
---------------------	---

DOUT 1 Output Type


DOUT 1 Output Type

Normal

Inverted

DOUT 1 Output Type functionality sets the initial *DOUT1* state. If functionality is configured in *Normal* mode digital output inactive state is low and when it is controlled by any scenario digital output is set to high state. Whenever functionality is configured in *Inverted* mode digital output inactive state is high and when it is controlled by any scenario digital output is set to low state.

DOUT1 in **Normal** state:

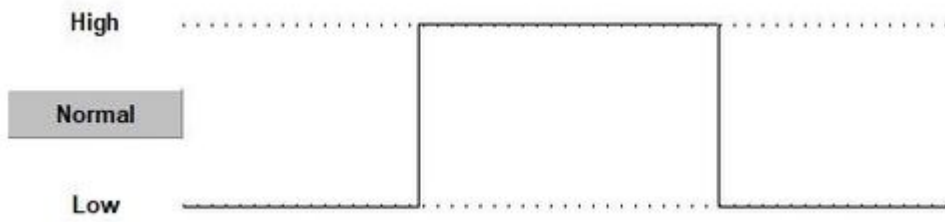

DOUT1 in **Inverted** state:



- **Notice!** Digital output type control functionality will not affect SMS/GPRS command **setdigout** execution.

 Available from Firmware version: [03.27.07.Rev.00](#)