

Template:FTX88X/FTX9XX System

□

Contents

- [1 Ignition settings](#)
- [2 Movement settings](#)
- [3 GNSS settings](#)
- [4 Movement delay](#)
- [5 Power saving settings](#)
- [6 Time synchronization settings](#)
- [7 LED settings](#)
- [8 Battery settings](#)

Ignition settings

Ignition settings

Select the ignition source, that determines how the device indicates the ignition state. Available ignition sources are based on the hardware of the device.

Source ⓘ

Power voltage × Accelerometer ×

ID ▾

High voltage (mV) ⓘ

30000

ID

Low voltage (mV) ⓘ

13199

ID

Ignition source will be used to determine the ignition status of the vehicle.

Possible ignition sources:

Power Voltage - if voltage is between High Voltage Level and Low Voltage Level (below *Ignition Settings* options) - ignition is ON; if voltage is higher than High Voltage Level or lower than Low Voltage Level - ignition is OFF.


Accelerometer - if movement sensor detects movement - ignition is ON; if movement is not detected - ignition is OFF;

More than one ignition source can be selected at the same time. Note: When there are 2 or more

sources selected, at least one condition has to be met to change Ignition status.
For Example, if both accelerometer and power voltage are selected, only one of the ignition detection conditions have to be true for ignition to be detected.

Ignition status is used in power management and the following functionalities: [Over Speeding](#), [Trip](#) and [Odometer settings](#).

Movement settings

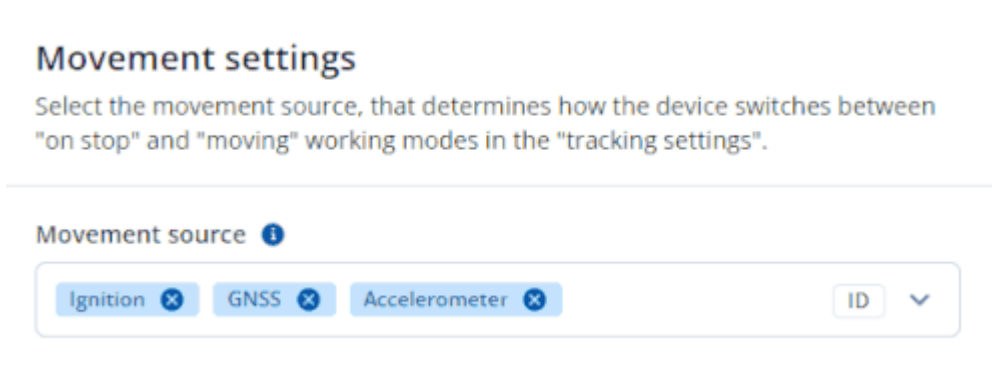

Movement source will be used to determine when a vehicle is on stop or moving.
Possible movement sources:

- **Ignition** - if ignition (based on ignition source) is ON, Vehicle MOVING mode is used; if the ignition is OFF, Vehicle on STOP mode is used;
- **Accelerometer** (movement) - if accelerometer detects movement, Vehicle MOVING mode is used; if there is no movement detected, Vehicle on STOP mode is used;
- **GNSS** - if GPS fix is acquired and speed ≥ 5 km/h vehicle MOVING mode is used; if GPS speed < 5 km/h, Vehicle on STOP mode is used;

GNSS settings

In *GNSS Source* settings user can configure which GNSS system(s) to use.



List of configurable GNSS sources:

- GPS
- GPS + GLONASS
- GPS + Galileo
- GPS + BeiDou
- GPS + GLONASS + Galileo + BeiDou

Movement delay



Movement delay will be use to set timeout of delay when will be detected accelerometer status changes.

Note: these settings impact ignition/movement sources.

The user can set:

- **Motion start delay (s)** - movement start delay in seconds;
- **Motion stop delay (s)** - movement stop delay in seconds;

Power saving settings



This feature will be used to save power consumption of external battery (power supply). It let the user choose one of four power saving modes which he would prefer: [GPS Sleep](#), [Deep Sleep](#), [Online Deep Sleep](#) and [Ultra Deep Sleep](#). Also, after the mentioned options you can find the Timeout (min) parameter which starts counting when the device is in STOP mode. After timeout is reached and all conditions for sleep mode are met, the device goes to sleep mode.

Note: Detail description and conditions about every mode you can find [here](#).

Time synchronization settings



NTP Resync parameter determines how often a device should resynchronize its time. If the set value is not equal to zero, time resynchronization will occur periodically at time intervals to which this parameter is set.

NTP server 1 and **NTP Server 2** let the user select which NTP server (s) will be used to re-synchronize time.

Time synchronization works by waiting a minute on startup to acquire fix and consequently synchronizes the time via GNSS.

This state checks the difference between RTC and GNSS times every second. If the difference of at least 3 seconds persists to be for 5 seconds, the firmware triggers a re-synchronization procedure by GNSS.

After that, the time difference is still calculated, but the difference is expected to persist for at least 5 minutes to trigger a GNSS time re-synchronization.

In the case that there is no fix or it is lost during the syncing by GNSS state, the firmware goes to the state of syncing by NTP. Entering the state of NTP syncing, the firmware immediately attempts to synchronize the time by triggering NTP and later on, does this periodically every time the configured NTP re-synchronization time is reached (if the re-synchronization time is set to 0 - no NTP sync is performed at all). Time synchronization by NITZ can occur at any time.



LED settings



This feature allows disabling or enabling status and navigation LED's

Battery settings

Battery settings

Select internal battery charge mode, which is used after connecting a device to the main power source.

Battery charge mode ⓘ

Always

ID ▼

Battery settings allow selecting battery charge modes.

Possible charge modes:

On need—Battery will charge on need

After ignition ON—battery will be charged after the ignition source will be ON

Always—Battery will be charged all the time

[[Category:{{{model}}} Configuration]]