



4. Connect the battery as shown on device.
5. Place PCB back into the place as shown in the picture, first the end that is marked as **1** needs to be inserted, then the end that is marked as **2**
6. Attach device **cover** back. Device is ready to be connected.

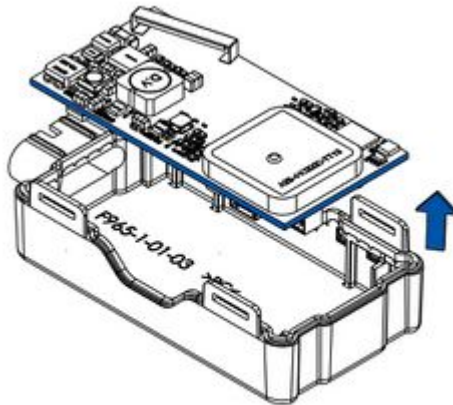


1




2

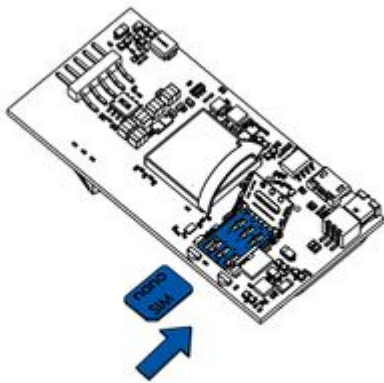


3

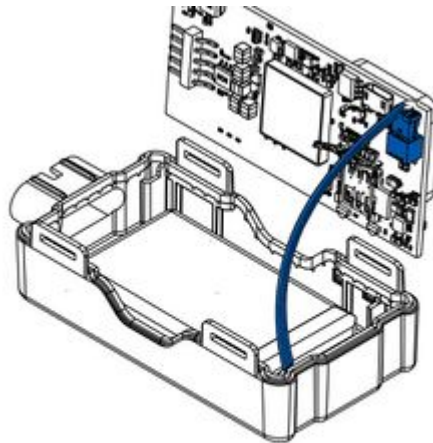

4

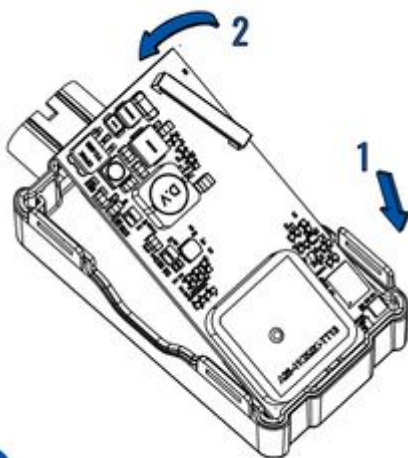

5

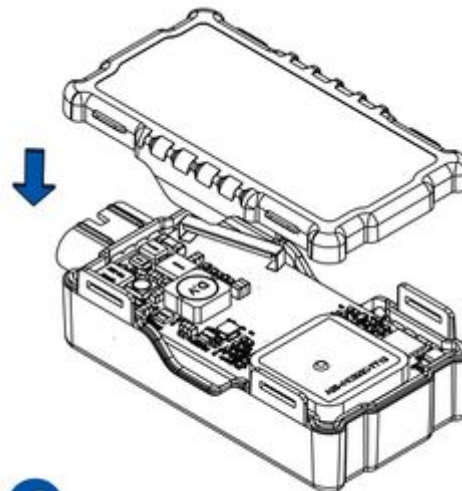

6

**Nano-SIM card insertion/removal must be performed when device is powered off -
external voltage and internal battery disconnected. Otherwise Nano-SIM card might be
damaged or device will not detect it.**