
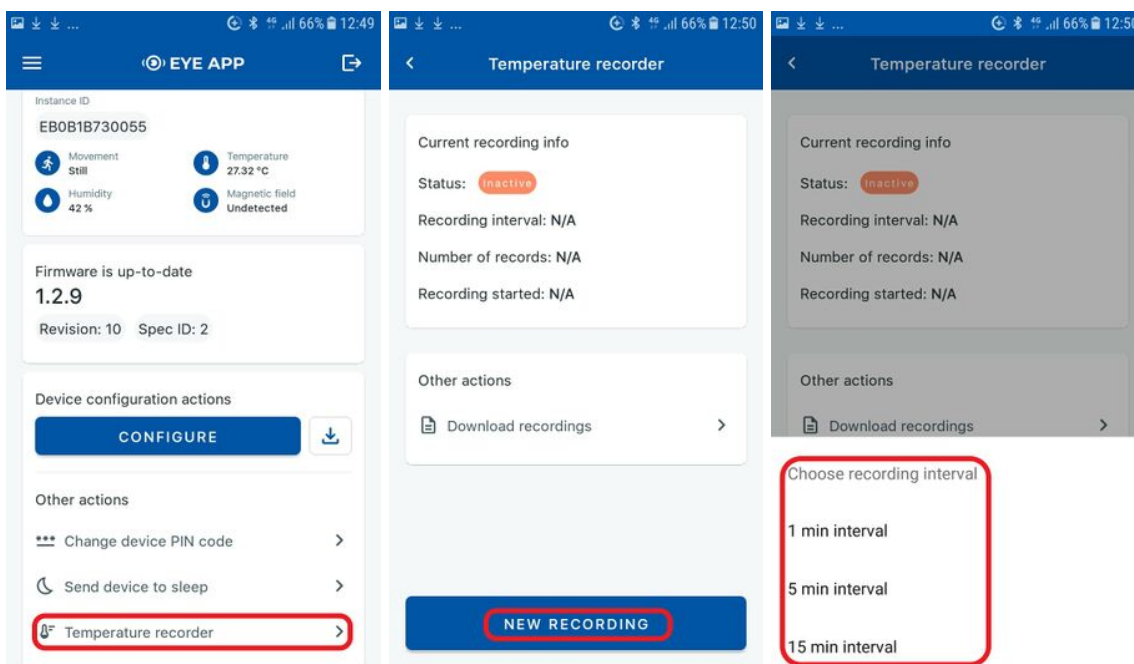


Teltonika EN12830 EYE APP

Quick start guide - EYE Sensor EN12830

1. Activate EYE Sensor EN12830 by touching it with any magnet
2. Download EYE APP (Evaluation version for EN12830).APK **for Android only** from this page 
3. If you have non EN12830 EYE APP, you should delete it first
4. Click on .apk file to install the app, open it once installation is finished
5. In the APP, find the desired sensor and press on it
6. Enter PIN (default is 123456)
7. How to start recording



Press "Temperature recorder" button in the sensor home screen

Press "NEW RECORDING" button.

Choose recording interval that you require.

Recording Status Info will change to Active

That's it! Now EYE Sensor EN12830 will be recording temperature logs to its internal memory.

8. How to download the records

