

Indoor tracking solution

□

Contents

- [1 Introduction](#)
- [2 Solution description](#)
- [3 Beacon installation](#)
- [4 Configuring FM device](#)
- [5 Configuring EyeBeacon](#)
- [6 Beacon data](#)
 - [6.1 Simple Beacon mode Eddystone protocol example with 1 beacon](#)
 - [6.1.1 iBeacon example with 2 beacons](#)
 - [6.2 Advanced Beacon Mode](#)

Introduction

Precise GNSS tracking might be physically not possible in certain environments, where the GNSS signal is unable to reach the tracking device. One example of such environment might be the inside of a large industrial warehouse, where the GNSS signal is attenuated by its walls. If the precise position of a vehicle, such as a forklift is needed to be tracked inside of it, other additional measures need to be taken. Teltonika indoor tracking solution ensures indoor positioning in such environments by utilising eye beacons. Eye Beacons are interchangeable with Eye Sensors; it works in the same way as an Eye Beacon while also providing additional features, such as magnetic field detection, temperature and humidity reading. All of which help ensure proper warehouse conditions to prevent damage of goods. However, for regular indoor positioning, it is recommended to use Eye Beacons, as they ensure a longer battery life.

Solution description

First, BLE beacons are set up in an inside space, their position will remain fixed and they will serve as a known location reference. These beacons periodically broadcast a signal which is unique for each beacon containing the beacon's ID. All FM devices can detect this broadcasted signal, therefore, many FM devices can utilise the set up beacons for positioning simultaneously. Once a FM device configured for the solution receives a signal from a beacon, the relationship between the strength of this received signal (RSSI-Received signal strength Indicator) and transmitted signal strength (which is a constant for each beacon), will be proportional to the distance between them, as radio waves propagate according to the inverse square law. In general, distance to the beacon can be calculated by the following formula:

$$\text{Distance} = 10^{\frac{(\text{Measured Power} - \text{Instant RSSI})}{(10 \cdot N)}}$$

Where,

- Measured Power is the RSSI value one meter away from the beacon if it is using iBeacon protocol, or 0 meters away if it is using Eddystone protocol.

- N is a constant for the environmental factor. It has a value between 2-4 and should be determined experimentally based on the facility.

With several beacons detected by the FM device and having calculated the distance to each of them, the position of the configured FM device can be approximated by a positioning algorithm, such as trilateration. These calculations are performed on the server side.



Beacon installation

The main challenge in using BLE beacon signals for indoor positioning is the variance of RSSI readings due to their sensitivity to environment factors. These factors include attenuation of signal due to physical obstacles: walls, doors, metal objects. The inside of buildings is not free space, so the accuracy of positioning is impacted by absorption and reflection from walls. Moving objects such as doors, vehicles, and people can pose an even greater issue, as they can affect the signal strength in unpredictable ways.

To maximise the accuracy of positioning, EyeBeacons should be installed on the walls, ceiling or racks and their position will remain fixed. Clear line of sight should be maintained for optimal coverage of the beacon signal. For best tracking coverage and accuracy results, beacons should be installed in such a way, that at least 3 beacon transmissions can be detected at any point of the indoor facility. The maximum open-field distance of EyeBeacon detection is 80 meters, however, indoor signal range will be smaller and depend on the configured transmitting power of the Eye beacon as well as layout of the facility. In general, the more beacons are set up, the higher the positioning accuracy.

Configuring FM device

The screenshot shows the Teltonika Configurator 1.7.22 B.3.27 R.21 interface. The top navigation bar includes buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. A device icon labeled 'FMB125' is shown with its IMEI (354017111317687), FW (03.27.13 Rev:01), and Configuration (8.14.0.0).

The main content area is divided into several sections:

- Device Info:**

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
FMB125	03/05/2022 08:31:51	14865 mV.	3 / 122 MB Format	4102 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.27.13 Rev:01	03/05/2022 14:16:44	354017111317687	05:44:32	Not Charging 98%
- GNSS Info:**
 - GNSS Status:**

Module Status	GNSS Packets
ON	20730
Fix Status	Fix Time
Fix	00:00:26
 - Location:**

Latitude/Longitude	Altitude	HDOP
54.700985, 25.260025	127.3	0.8
Speed	Angle	PDOP
0 km/h.	27.74°	1.13
 - Satellites:**

Visible		In use	
GPS	GLONASS	GPS	GLONASS
11	10	8	5
BeiDou	Galileo	BeiDou	Galileo
0	0	0	0
IRNSS		IRNSS	
0		0	
Total In View		Total In Use	
21		13	

The left sidebar contains a navigation menu with options: Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, Authorization ID List, I/O, OBD II, CAN Adapter, and RS232 \ RS485.

1. In System Settings Enable [Codec8 Extended](#);
2. In [Bluetooth®](#) settings Enable Bluetooth®, set this setting as either "Enable (hidden)" or "Enable (visible)", otherwise Bluetooth® will be disabled;
3. In [Bluetooth® 4.0](#) settings, set Non Stop Scan to "enabled" or "disabled" and configure the desired update interval.
4. In [Beacon list](#) settings, configure Beacon Detection as "Configured" and Beacon Record as "Periodic". This configuration will allow detection of beacons from the beacon list and send periodical positioning data to the server. The lower the period, the more frequently a position update can be obtained. If On Change is selected - device will not create Beacon record after every scan procedure is completed unless scanned Beacon list will change.

- If the beacon detection option is set to Configured, only beacons from the beacon list will be detected and their data will be sent to the server.
 - If beacon detection is set to All, all beacons will be detected by the FM device, therefore beacon lists will not have to be configured on the devices.
 - It is also possible to configure the device to recognize the beacon by its MAC address.
- As always, FM device configuration will vary depending on the User's exact needs.

Configuring EyeBeacon


Devices work constantly and are ready to perform out of the box. Default basic Sensor settings are set to:

- Transmitting at 2 dBm power.
- Data advertising at 3 second intervals.
- Eddystone protocol

However, these parameters can be changed. Transmitting power can be set from -14dBm to 8dBm - higher transmitting power equates to a larger beacon range. Data advertising interval can be selected from the range 20ms to 10s, shorter data advertising intervals ensure a more stable signal. However, increasing power or reducing the advertising interval affects the battery life of the Eye Beacon.

EYE Beacon / BTSID1	EYE Sensor / BTSMP1
2+ years (Tx=2 dBm; interval: 1 s)	1+ year (Tx=2 dBm; interval: 1 s)
5+ years (Tx=2 dBm; interval: 3 s)	2.5+ years (Tx=2 dBm; interval: 3 s)
10+ years (Tx=2 dBm; interval: 10s)	5+ years (Tx=2 dBm; interval: 10s)

More information can be found [here](#) All configuration of the Eye Beacon will be done via [EYEapp](#). On the app, wanted protocol can be selected, transmitting power, advertising interval and Beacon ID can be easily configured. Below is an example configuration.

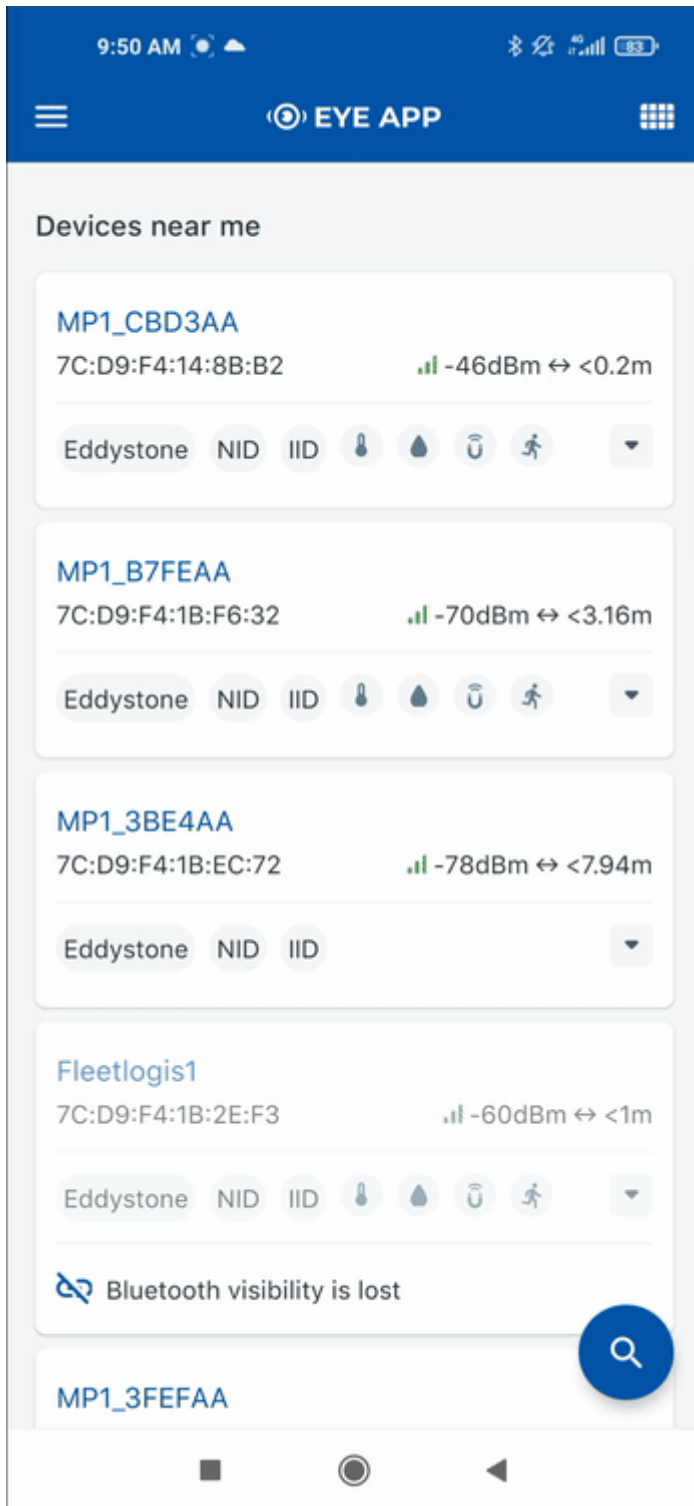

Beacon data

After the FM device and EyeBeacons are configured, the FM device will be able to read EyeBeacon data and send it to the server, where distance and positioning calculations are to be performed. Depending on the beacon mode parameter setting on the FM device, Beacon data will be sent to the server in a variable length packet AVL ID: 385 or AVL ID 548.

- if advanced beacon mode is selected, beacon data is packed into AVL ID: 548. Advanced beacon mode allows the user to configure beacon data capturing manually.
- if simple mode is selected, beacon data is packed into AVL ID: 385. Using simple mode, beacon parsing is done automatically (Eddystone and iBeacon protocols are supported).

In order to make sense of the data sent to the server for the calculation to be made, packets need to

be parsed. Depending on the selected beacon protocol, packet structure will differ. Provided below are examples of parsing a packet containing Beacon data.

Simple Beacon mode Eddystone protocol example with 1 beacon

received raw data:

```
000000000000000408e01000001701f9b3fa9010f0e502a209ab461007400c60e000001810001000000
000000000000001018100131101e39b606aa38255aa8e460b154e2d0055cf0100000056 parsing
example:
```

AVL Data Packet

	AVL Data Packet Part	HEX Code Part
	Zero Bytes	00 00 00 00
	Data Field Length	00 00 00 40
	Codec ID	8E (Codec8 Extended)
	Number of Data 1 (Number of Total Records)	01
	Timestamp	00 00 01 70 1F 9B 3F A9 (GMT: Friday, 07 February 2020 12:23:53.001)
	Priority	01
	Longitude	0F 0E 50 2A
	Latitude	20 9A B4 61
	Altitude	00 74
	Angle	00 C6
	Satellites	0E
	Speed	00 00
	Event IO ID	01 81 (385)
AVL Data	N of Total ID	00 01
	N1 of One Byte IO	00 00
	N2 of Two Bytes IO	00 00
	N4 of Four Bytes IO	00 00
	N8 of Eight Bytes IO	00 00
	NX of X Bytes IO	00 01
	N'th IO ID - AVL ID.	01 81 (385)
	Length of Variable Length IO	00 13
	Value of Variable Length IO	1101E39B606AA38255AA8E460B154E2D0055CF
	Number of Data 2 (Number of Total Records)	01
	CRC-16	00 00 00 56

AVL 385 Parsing

Data part	BLE beacon flags #1	Beacon ID #1	Signal Strength #1	Beacon data #2
1 Byte	1 Byte	20/16 Bytes	1 Byte	...

```

Eddystone - 16B (Namespace,
Instance ID)
11 - Data part,
1 Record out of 01 - Eddystone
1 Beacon with RSSI E39B606AA38255AA8E46 - BLE -49 - -
Packet. Beacon Namespace
0B154E2D0055 - BLE Beacon
Instance ID

```

iBeacon example with 2 beacons

received raw data:

```

000000000000005a8e010000016b69b0c9510000000000000000000000000018100010000
0000000000000010181002d11216b817f8a274d4fdb62d33e1842f8df8014d0
22bbf21a579723675064dc396a7c3520129f6190000000bf0100003e5d

```

parsing example:

AVL Data Packet	
AVL Data Packet Part	HEX Code Part
Zero Bytes	00 00 00 00
Data Field Length	00 00 00 5A
Codec ID	8E (Codec8 Extended)
Number of Data 1 (Number of Total Records)	01
Timestamp	00 00 01 6B 69 B0 C9 51(GMT: Tuesday, 18 June 2019 08:25:22.001)
Priority	00
Longitude	00 00 00 00
Latitude	00 00 00 00
Altitude	00 00
Angle	00 00
Satellites	00
Speed	00 00
Event IO ID	01 81 (385)
N of Total ID	00 01
N1 of One Byte IO	00 00
N2 of Two Bytes IO	00 00
N4 of Four Bytes IO	00 00
N8 of Eight Bytes IO	00 00
NX of X Bytes IO	00 01
N'th IO ID - AVL ID.	01 81 (385)
Length of Variable Length IO	00 2D
Value of Variable Length IO	11216B817F8A274D4FDB62D33E1842F8DF8014D 022BBF21A579723675064DC396A7C3520129F6190 000000BF
Number of Data 2 (Number of Total Records)	01
CRC-16	00 00 3E 5D

AVL 385 Parsing

Data part	BLE beacon flags #1	Beacon ID #1	Signal Strength #1	Beacon data #2
1 Byte	1 Byte	20/16 Bytes	1 Byte	...

```

11 -
Data
part, 1 21 - 17F8A274D4FBDB62D33E1842F8DF8 -
Record iBeacon UUID 21A579723675064DC396A7C3520129F61900
out of with 014D - Major -65 000000BF
1 RSSI 022B - Minor
Beacon
Packet.
21 - A579723675064DC396A7C3520129F619
iBeacon - UUID
with 0000 - Major -65 -
RSSI 0000 - Minor

```

More examples on parsing AVL ID:385 can be found [here](#)

Note, the signal strength byte value in Hex format must be converted to Decimal from signed 2's complement, the converted value will be in dBm. For Eddystone protocol, Beacon namespace:instance ID will be used to identify the beacon, for iBeacon protocol UUID:major:minor will be used. From there, the signal strength information can be used to calculate the distance to the beacon, then various positioning algorithms can be implemented on the server side for indoor positioning.

It is also possible to identify beacons by their MAC address, by selecting advanced beacon mode on the FM device configuration. Below is an example

Advanced Beacon Mode

When advanced beacon mode is selected, beacon data capturing can be configured manually (AVL ID 548). This mode can prove very useful in several scenarios as it provides a very flexible and customisable method of capturing Beacon data. For example, advanced beacon mode could be used to read additional data, such as temperature or humidity from EyeSensors or monitoring beacons' battery voltage. A detailed description of advanced beacon mode can be found [here](#).

Advanced beacon mode can also be used for configuring the FM device to discover beacons based on their MAC address, instead of UUID:major:minor for iBeacon or namespace:instanceID for Eddystone.

Below is an example configuration for the FM device discovering EyeBeacons whose MAC addresses match the ones specified in beacon list and are using Eddystone protocol.

The screenshot shows the Teltonika Configurator interface. At the top, there are buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. The main area is divided into sections: 'Device Info' (showing Device Name: FMB125, Last Start Time: 03/05/2022 08:31:50, Power Voltage: 14852 mV, Ext Storage: 2 / 122 MB, Battery Voltage: 4098 mV, Firmware Version: 03.27.13 Rev:01, RTC Time: 03/05/2022 13:33:28, Device IMEI: 354017111317687, Device Uptime: 05:01:38, Internal Battery Status: Not Charging 98%), 'GNSS Info' (with sub-tabs for GSM Info, I/O Info, and Maintenance), and 'Satellites' (showing visible and in-use satellites like GPS, GLONASS, BeiDou, Galileo, and IRNSS).

Received Raw beacon frame with AVL ID 548, containing data from 1 beacon:
 000000000000003a8e010000018088ef844b000f0e5732209ab89c004f00101000000224000100000
 000000000000010224000d010b0001dc01067cd9f418d9c001000027b7
 AVL ID 548 (224 in hex) part:
 010b0001dc01067cd9f418d9c0

AVL 548 parsing

Parsed Beacon data part	HEX Code Part
(Constant)	01
1st Beacon data length	0b
RSSI (Parameter 00)	00
RSSI length	01
RSSI value	dc (converted to dec -> -49)
Beacon ID (Parameter 01)	01
Beacon ID length	06
Beacon ID	7cd9f418d9c0

The below table represents possible Beacon Parameters.

Parameters	
00	RSSI
01	Beacon ID
02	Additional beacon data

An example configuration of how to capture RSSI as well temperature readings from an Eye Sensor can be found [here](#)