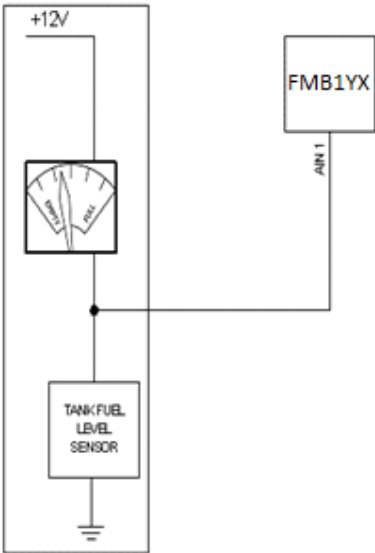
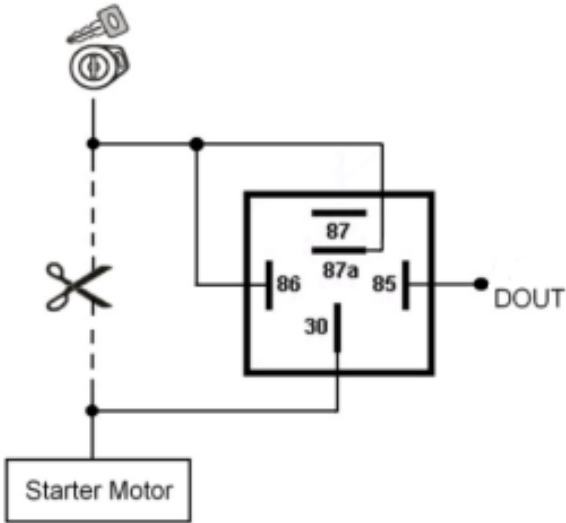


Template:FMM Accessories

⛔ Please order accessories separately as they are not included into device package.

Accessory and its description	Accessory connection schematic
Fuel tank sensors A fuel tank level sensor which indicates the approximate fuel level on the driver's indicator panel exists in most cars. If the sensor returns analogue signal proportional to fuel level it can be connected to FMM1YX Analog input. After connection to the tank fuel level sensor a calibration is needed because most fuel tank sensors are not linear. Calibration is performed by measuring voltage values resulting from the volume of fuel in tank.	Fuel sensor connection to FMM1YX 
Alarm buttons, door sensors etc. Alarm buttons, door sensors, ignition, etc. have two output states: high or low. FMM125 Digital inputs are used to detect these states.	Panic button connection to FMM1YX ⛔
Relays In cases when sensor output signal is negative, an additional relay has to be installed to convert negative signal to positive.	Inverting relay connection to FMM125 ⛔
Immobilizer relay When connected as shown on the right hand side, FMM1YX disables engine starter when output is ON.	Immobilizer relay connection to FMM1YX output 

Automotive relay

An ordinary automotive relay is used to invert input signal or to immobilize engine starter. Note that relays can be 12 V or 24 V capable.




1-Wire devices

One of the implemented features on FMM1YX is 1-Wire® data protocol, which enables connection to devices such as thermometer (DS1820, DS18S20 and DS18B20) and I-Button DS1990A.

Automotive relay pinout



Digital thermometer DS1820 and TTJ100 connection to FMM1YX

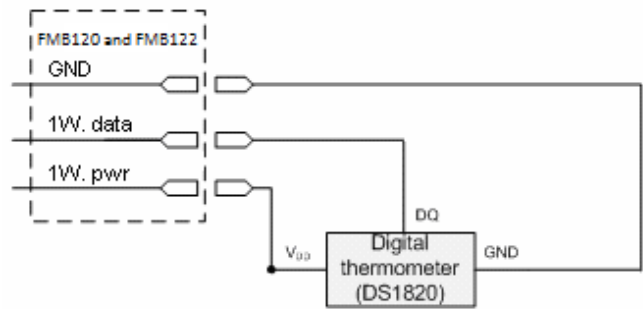

TTJ sensor pinout



I-Button DS1990A connection to FMM1YX

