

4. CHARACTERISTICS

MODULE		Interface	2.0 Micro-USB, Micro-SIM, 128 MB internal flash memory
Name	Teltonika TM2500		
Technology	GSM, GPRS, GNSS, BLUETOOTH (4.0 + LE)		
GNSS		LED indication	2 status LED lights
GNSS		Buzzer	Internal
PHYSICAL SPECIFICATION			
GNSS	GPS, GLONASS, GALILEO, BEIDOU, SBAS, QZSS, DGPS, AGPS		
Receiver	33 channel		
Tracking sensitivity	-165 dBm		
Accuracy	< 3 m		
GNSS receiver start times	Hot < 1s, Warm < 25s, Cold < 35s		
CELLULAR			
Technology	GSM		
2G bands	Quad-band 850 / 900 / 1800 / 1900 MHz		
Data transfer	GPRS Multi-Slot Class 12 (up to 240 kbps), GPRS Mobile Station Class B		
Data support	SMS (text)		
POWER			
Input voltage range	8-50 V DC with overvoltage protection		
Back-up battery	170 mAh Li-ion battery 3.7 V internal back-up battery		
INTERFACE			
Modifications	UART		
GNSS antenna	Internal High Gain		
Cellular antenna	Internal High Gain		
Sensors	Accelerometer		

* Depends on scooter model

5. WARRANTY AND RETURN POLICIES

TELTONIKA gives guarantee for its products for a period of 24 months. All batteries carry a reduced 6 month warranty period. If a product fails within mentioned warranty period the product can be:

- Repaired
- Replaced with a new product
- Replaced with an equivalent repaired product fulfilling the same functionality
- Replaced by an equivalent product if the production is discontinued.

How to submit a warranty claim

To obtain warranty service, please register Return Merchandise Authorization (RMA) query in VIP Helpdesk or contact your sales manager. After gathering information support engineer will initiate RMA form, which the user would need to fill in. Once the form is confirmed, it must be printed and sent with the shipment.

More information can be found at:
<https://teltonika-iot-group.com/warranty-repair/>

6. CERTIFICATIONS AND APPROVALS

- TST100 CE / RED
- TST100 EAC
- TST100 Ukrainian UCRF
- TST100 RoHS
- TST100 Declaration of IP rating
- Declaration of IMEI assignment
- Declaration of IMEI security
- REACH Regulation Declaration

7. SAFETY INFORMATION

This message contains information on how to operate the device safely. By following these requirements and recommendations, you will avoid dangerous situations. Please read these instructions carefully and follow them strictly before operating the device!



Do not disassemble the device
 If the device is damaged, the power supply cables are not isolated or the isolation is damaged, **DO NOT** touch the device before unplugging the power supply



Interference
 All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



The device must be connected only by qualified personnel.



The device must be firmly fastened in a predefined location.



The programming must be performed using a PC with autonomic power supply.



Installation and/or handling during a lightning storm is prohibited.



The device is susceptible to water and humidity if the device housing is not properly closed.



Risk of explosion if battery is replaced by an incorrect type.
 Dispose of used batteries according to the instructions.



Battery should not be disposed of with general household waste.
 Bring damaged or worn-out batteries to your local recycling center or dispose them to battery recycle bin found in stores.

TST100


KICK E-SCOOTER TRACKER^{EASY}

Quick Start Guide



1. SET UP YOUR DEVICE*



1. **Remove** the top cover.
2. Insert **Micro-SIM** card as shown with **PIN request disabled**. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Connect the **battery**.
4. To **power up** TST100, connect **the plug** to the E-scooter.
5. **Configure** the device by connecting micro-USB from TST100 to PC
6. After configuration, **disconnect** TST100 from PC. **Attach the lid** and put the **screws** back in as shown.
7. Device is ready to be used.

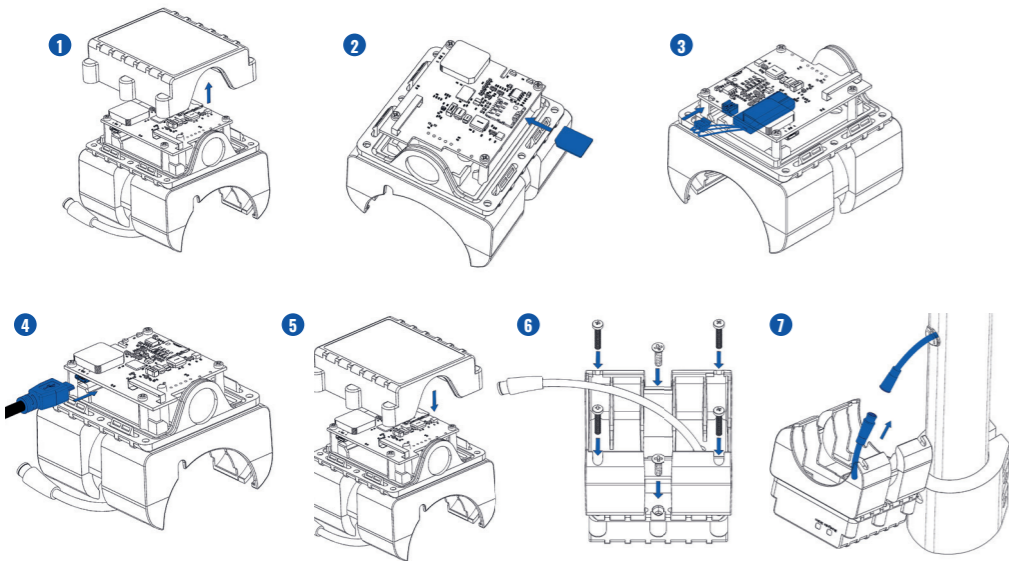

Micro-SIM card insertion/removal must be performed when device is powered off – external voltage and battery are disconnected. Otherwise, Micro-SIM card might be damaged or device will not detect it.

*Given instructions are for sharing version of Segway kick e-scooters with exposed cable on the tube.

1.1. PINOUT

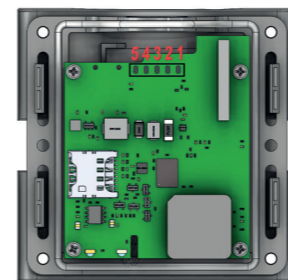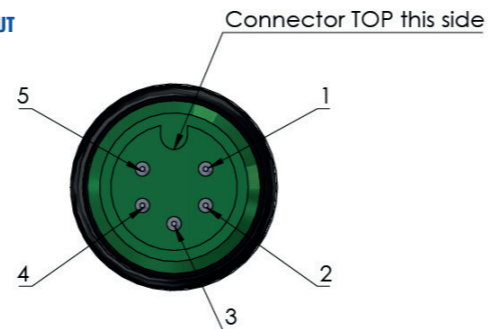

PIN NAME	JL-F39-Z508JG CABLE CONNECTOR PIN NO.	TST100 PCB PIN NO.
VCC (+) (8-50)V DC	1	1
GND (-)	5	2
RX	3	3
TX	4	4
Power Control Wire (PCW)	2	5

Note! Always double check GND and PCW PINS!

2.CONFIGURE YOUR DEVICE

2.1. PC PREPARATION (WINDOWS)

1. Please download COM port drivers from Teltonika here:

<https://wiki.teltonika-mobility.com/wikibase/images/d/d0/TeltonikaCOMDriver.zip>

2. Extract and run **TeltonikaCOMDriver.exe**.
3. Click **Next** in driver installation window.
4. In the following window click **Install** button.
5. Setup will continue installing the driver and eventually the confirmation window will appear. Click **Finish** to complete the setup.

2.2. CONFIGURATOR (WINDOWS)

At first the device will have default factory settings but unless you order pre-configured device. These settings should be changed according to the user's needs. Main configuration can be performed via **Teltonika Configurator** software. Configurator operates on Microsoft Windows OS and uses prerequisite MS .NET Framework. Make sure you have the correct version installed: MS .NET Framework 4.6.2 or newer.

2.3. DEVICE CONNECTION TO CONFIGURATOR (WINDOWS)

1. Power-up the device with **DC voltage E-scooter** or **external (8 – 50 V) power supply** using supplied **power cable**. LED's should start blinking, see **LED behavior description**.
2. Connect device to computer using **Micro-USB** cable or **Bluetooth** (*Device Bluetooth is enabled by default, default password 5555*) connection.
3. You are now **ready** to use the device on your computer.

2.4. CONFIGURE THE DEVICE

1. Connect device to computer using Micro-USB cable and open Teltonika Configurator.
2. Configuration process begins by pressing on connected device:



3. After you have finished configuring the device, press **Save to device** button.
4. When configuration is saved, disconnect the device from USB and reattach the cover.

More details about device configuration using Teltonika Configurator can be found in the Teltonika TELEMEDIC wiki knowledge base <https://wiki.teltonika-mobility.com>

3. LED INDICATIONS

BEHAVIOR	MEANING
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because Device is not working or Device is in sleep mode
Blinking fast constantly	Device firmware is being flashed