



FMM880

Simple and small waterproof tracker


Quick Manual v1.3

CONTENT


| | |
|--|----|
| Know your device..... | 3 |
| Pinout | 4 |
| Set up your device | 5 |
| PC Connection (Windows)..... | 6 |
| How to install USB drivers (Windows) | 6 |
| Configuration..... | 7 |
| Quick SMS configuration..... | 9 |
| Mounting recommendations..... | 11 |
| Basic characteristics | 12 |
| LED indications..... | 12 |
| Safety information | 15 |
| Certification and Approvals | 16 |
| Warranty | 17 |
| Warranty disclaimer | 17 |

KNOW YOUR DEVICE

TOP VIEW

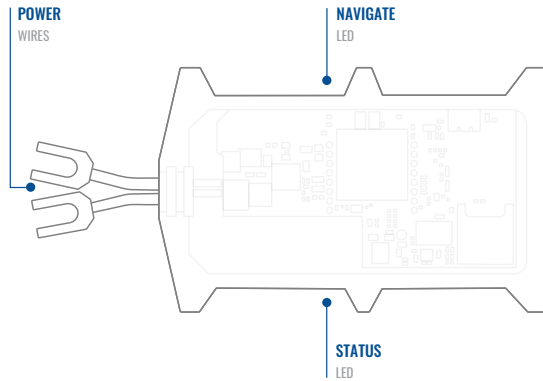


TOP VIEW (WITHOUT COVER)

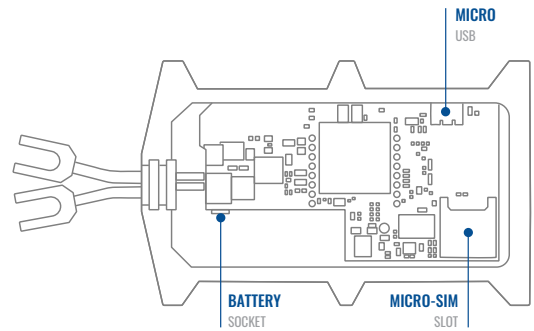

PINOUT


| PIN NUMBER | PIN NAME | DESCRIPTION |
|------------|---------------------|----------------------------------|
| 1 | VCC (10-30)V DC (+) | (RED) Power supply (+10-30 V DC) |
| 3 | GND (-) | Ground |

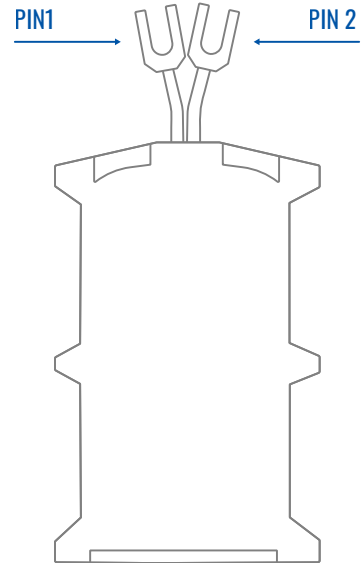

FMM880 pinout


SET UP YOUR DEVICE

HOW TO INSERT MICRO-SIM CARD AND CONNECT THE BATTERY

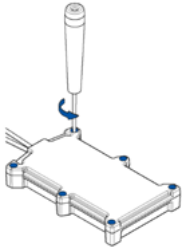


1 UNSCREW SCREWS

Unscrew **6 screws** counter clockwise.

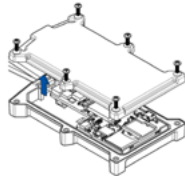


2 COVER REMOVAL

Remove the **cover**.

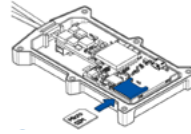


3 MICRO-SIM CARD INSERT

Insert **Micro-SIM** card as shown with **PIN request disabled** or read our Wiki how to enter it later with [Teltonika Configurator](#)¹. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.

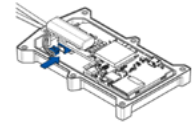


4 BATTERY CONNECTION

Connect the battery as shown to device. Position the battery in place where it does not obstruct other components.

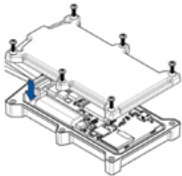

5 ATTACHING COVER BACK

After configuration, see "PC Connection (Windows)", attach device cover back and screw in all screws.

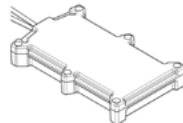

6 DEVICE IS READY

Device is ready to be mounted.

¹wiki.teltonika-gps.com/view/Teltonika_Configurator

PC CONNECTION (WINDOWS)

1. Power-up FMM880 with DC voltage (10 – 30 V) power supply using **supplied power cable**. LED's should start blinking, see "[LED indications](#)".
2. Connect device to computer using **Micro-USB cable** or Bluetooth connection:
 - Using Micro-USB cable
 - You will need to install USB drivers, see "[How to install USB drivers \(Windows\)](#)"
 - Using **Bluetooth**
 - FMM880 **Bluetooth** is enabled by default. Turn on Bluetooth on your PC, then select **Add Bluetooth or other device** > **Bluetooth**. Choose your device named – "FMM880_last_7_imei_digits", without LE in the end. Enter default password 5555, press **Connect** and then select **Done**.
3. You are now ready to use the device on your computer.

¹wiki.teltonika-gps.com/view/FMC880_LED_status

²Page 6, "How to install USB drivers"

HOW TO INSTALL USB DRIVERS (WINDOWS)

1. Please download COM port drivers from [here](#)¹.
2. Extract and run **TeltonikaCOMDriver.exe**.
3. Click **Next** in driver installation window.
4. In the following window click **Install** button.
5. Setup will continue installing the driver and eventually the confirmation window will appear. Click **Finish** to complete the setup.

¹wiki.teltonika-gps.com/images/d/d0/TeltonikaCOMDriver.zip

CONFIGURATION

At first FMM880 device will have default factory settings set. These settings should be changed according to the users needs. Main configuration can be performed via [Teltonika Configurator](#)¹ software. Get the latest **Configurator** version from [here](#)². Configurator operates on **Microsoft Windows OS** and uses prerequisite **MS .NET Framework**. Make sure you have the correct version installed.


¹ wiki.teltonika-gps.com/view/Teltonika_Configurator


² wiki.teltonika-gps.com/view/Teltonika_Configurator_versions

MS .NET REQUIREMENTS

| Operating system | MS .NET Framework version | Version | Links |
|------------------|---------------------------|---------------|---|
| Windows Vista | | | |
| Windows 7 | | | |
| Windows 8.1 | MS .NET Framework 4.6.2 | 32 and 64 bit | www.microsoft.com ¹ |
| Windows 10 | | | |


¹ dotnet.microsoft.com/en-us/download/dotnet-framework/net462

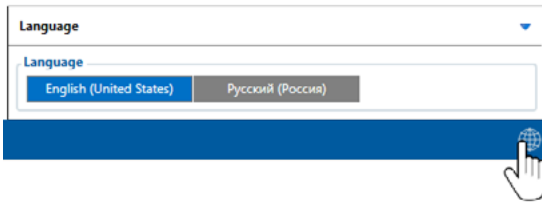

Downloaded Configurator will be in compressed archive. Extract it and launch Configurator.exe. After launch software language can be changed by clicking  in the right bottom corner.





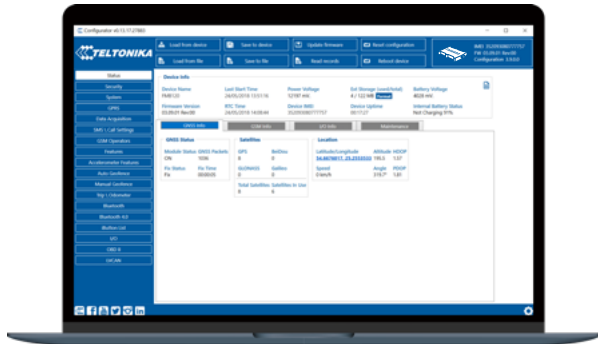





Configuration process begins by pressing on connected device.



After connection to Configurator **Status window** will be displayed.

Various **Status window**¹ tabs display information about **GNSS**², **GSM**³, **I/O**⁴, **Maintenance**⁵ and etc. FM880 has one user editable profile, which can be loaded and saved to the device. After any modification of configuration the changes need to be saved to device using **Save to device** button. Main buttons offer following functionality:

-  **Load from device** – loads configuration from device.
-  **Save to device** – saves configuration to device.
-  **Load from file** – loads configuration from file.
-  **Save to file** – saves configuration to file.
-  **Update firmware** – updates firmware on device.
-  **Read records** – reads records from the device.
-  **Reboot device** – restarts device.
-  **Reset configuration** – sets device configuration to default.

Most important configurator section is **GPRS** – where all your server and **GPRS settings**⁶ can be configured and **Data Acquisition**⁷ – where data acquiring parameters can be configured. More details about FM880 configuration using Configurator can be found in our [Wiki](#)⁸.

¹wiki.teltonika-gps.com/view/FMM880_Status_info

²wiki.teltonika-gps.com/view/FMM880_Status_info#GNSS_Info

³wiki.teltonika-gps.com/view/FMM880_Status_info#GSM_Info

⁴wiki.teltonika-gps.com/view/FMM880_Status_info#I2FO_Info

⁵wiki.teltonika-gps.com/view/FMM880_Status_info#Maintenance

⁶wiki.teltonika-gps.com/view/FMM880_GPRS_settings

⁷wiki.teltonika-gps.com/view/FMM880_Data_acquisition_settings

⁸wiki.teltonika-gps.com/view/FMM880_Configuration

QUICK SMS CONFIGURATION

Default configuration has optimal parameters present to ensure best performance of track quality and data usage.

Quickly set up your device by sending this SMS command to it:

```
« setparam 2001:APN;2002:APN_username;2003:APN_password;2004:Domain;2005:Port;2006:0»
```

1

2

3

4

5

6


Note: Before SMS text, two space symbols should be inserted.

GPRS SETTINGS:

- 1 2001 – APN
- 2 2002 – APN username (if there are no APN username, empty field should be left)
- 3 2003 – APN password (if there are no APN password, empty field should be left)

SERVER SETTINGS:

- 4 2004 – Domain
- 5 2005 – Port
- 6 2006 – Data sending protocol (0 – TCP, 1 – UDP)

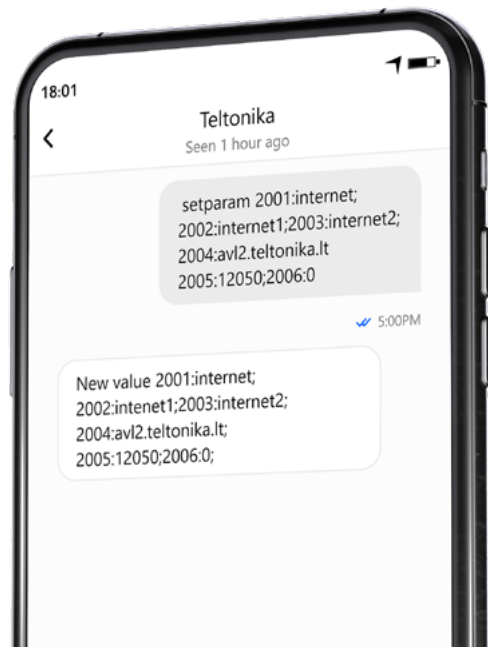

DEFAULT CONFIGURATION SETTINGS

MOVEMENT AND IGNITION DETECTION:



VEHICLE MOVEMENT
will be detected by
accelerometer



IGNITION
will be detected by
vehicle power voltage
between 13,2 – 30 V

DEVICE MAKES A RECORD ON STOP IF:



1 HOUR PASSES
while vehicle is
stationary and
ignition is off



EVERY 120 SECOND
it is sent to the server
If device has made a
record

DEVICE MAKES A RECORD ON MOVING IF ONE OF THESE EVENTS HAPPEN:



PASSES
300 seconds



VEHICLE DRIVES
100 meters



VEHICLE TURNS
10 degrees



SPEED DIFFERENCE
between last coordinate
and current position is
greater than 10 km/h

After successful SMS configuration, FMM880 device will synchronize time and update records to configured server. Time intervals and default I/O elements can be changed by using [Teltonika Configurator](#)¹ or [SMS parameters](#)².

¹ wiki.teltonika-gps.com/view/Teltonika_Configurator

² wiki.teltonika-gps.com/view/Template:FMB_Device_Family_Parameter_list

MOUNTING RECOMMENDATIONS

DEVICE FASTENING


- Locate the battery in your vehicle. If present remove the battery cover to access the battery.
- There is a double sided tape on the back of the device (**Double sided tape on the back**), use it to attach the device on the battery, so that the GNSS antenna and LEDs indicators are facing up (**Example of device mounting**).

CONNECTING POWER WIRE


- Device power wire is designed to be directly connected to the positive terminal fastener of the vehicle battery (**Example of device mounting**).

CONNECTING GROUND WIRE

- Device ground wire is designed to be directly connected to the negative terminal fastener of the vehicle battery (**Example of device mounting**).

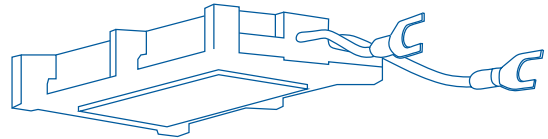

1 DOUBLE SIDED TAPE ON THE BACK

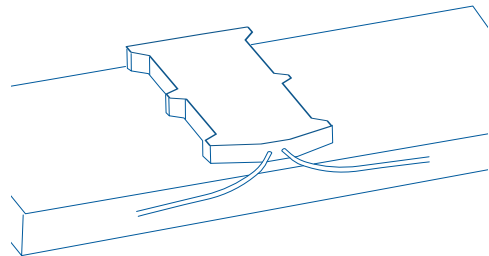

2 EXAMPLE OF DEVICE MOUNTING

LED INDICATIONS

NAVIGATION LED INDICATIONS

| BEHAVIOUR | MEANING |
|--------------------------|---|
| Permanently switched on | GNSS signal is not received |
| Blinking every second | Normal mode, GNSS is working |
| Off | GNSS is turned off because: Device is not working or Device is in sleep mode |
| Blinking fast constantly | Device firmware is being flashed |

STATUS LED INDICATIONS

| BEHAVIOUR | MEANING |
|--------------------------------|---|
| Blinking every second | Normal mode |
| Blinking every two seconds | Sleep mode |
| Blinking fast for a short time | Modem activity |
| Off | Device is not working or Device is in boot mode |

BASIC CHARACTERISTICS

MODULE

| | |
|------------|------------------------------------|
| Name | Q3AB0: Quectel BG95-M3 with AG3335 |
| Technology | LTE CAT 1/GSM/GPRS/GNSS/BLUETOOTH |

GNSS

| | |
|------|---|
| GNSS | L1: GPS, GLONASS, GALILEO, BEIDOU, SBAS*, QZSS* L5: GPS, GALILEO, BEIDOU |
|------|---|

| | |
|----------|----------------------------------|
| Receiver | L1: 75 channel L5: 60 channel |
|----------|----------------------------------|

| | |
|----------------------|----------|
| Tracking sensitivity | -165 dBm |
|----------------------|----------|

| | |
|-------------------|-------------|
| Position Accuracy | < 1.8 m CEP |
|-------------------|-------------|

| | |
|-------------------|----------------------------------|
| Velocity Accuracy | < 0.1 m/s (within +/- 15% error) |
|-------------------|----------------------------------|

| | |
|-----------|-------|
| Hot start | < 1 s |
|-----------|-------|

| | |
|------------|--------|
| Warm start | < 25 s |
|------------|--------|

| | |
|------------|--------|
| Cold start | < 35 s |
|------------|--------|

*Optional modes available with custom firmware applications, for more information contact your sales manager

CELLUAR

| | |
|----------|------------------|
| 2G bands | GSM: B2/B3/B5/B8 |
|----------|------------------|

| | |
|----------------|---|
| 4G bands | LTE FDD (CAT M1): B1/B2/B3/B4/B5/ B8/B12/B13/B18/B19/B20/B25/B26/ B27/B28/B66/B85 LTE-TDD (CAT NB2): B1/B2/B3/B4/ B5/B8/B12/B13/B18/B19/B20/B25/ B28/B66/B71/B85 |
| Data transfer | LTE FDD (CAT M1): Max. 588 Kbps (DL) / Max. 1119 Kbps (UL) LTE TDD (CAT NB2): Max. 127 Kbps (DL) / Max. 158.5 Kbps (UL) GSM (GPRS): Max. 107 Kbps (DL) / Max. 85.6 Kbps (UL) |
| Transmit power | Class 4 for GSM850/900: 33±2dBm Class 1 for GSM1800/1900: 30±2dBm Class 3 for LTE-TDD: 20±2dBm Class 3 for LTE-FDD: 20±2dBm Bluetooth: 4.57±2dBm Bluetooth LE: -4.83±2dBm |
| Data support | SMS (TEXT, PDU), Network protocols (TCP, UDP, TLS, EGTS, MQTT) |

POWER

| | |
|---------------------|---|
| Input voltage range | 10 - 30 V DC with overvoltage protection |
| Back-up battery | 170 mAh Li-Po battery 3.7 V (0.63 Wh) |
| Internal fuse | 3A, 125V |

BLUETOOTH

| | |
|-----------------------|---|
| Specification | 4.0 + LE |
| Supported peripherals | Temperature and Humidity sensor¹ , OBDII dongle, Inateck Barcode Scanner, Universal BLE sensors support |

INTERFACE

| | |
|----------------|-----------------------------|
| GNSS antenna | Internal High Gain |
| GSM antenna | Internal High Gain |
| USB | 2.0 USB Micro B |
| LED indication | 2 status LED lights |
| SIM | Micro-SIM |
| Memory | 128MB internal flash memory |

PHYSICAL SPECIFICATION

| | |
|------------|---------------------------------|
| Dimensions | 92.5 x 57.6 x 14 mm (L x W x H) |
| Weight | 63 g |

OPERATING ENVIRONMENT

| | |
|---|------------------|
| Operating temperature (without battery) | -40 °C to +85 °C |
| Storage temperature (without battery) | -40 °C to +85 °C |

¹ teltonika.lt/product/bluetooth-sensor/

| | |
|---------------------------------------|---|
| Operating temperature (with battery) | 0 °C to +40 °C |
| Operating humidity | 5% to 95% non-condensing |
| Operating temperature (with battery): | -20 °C to +40 °C |
| Storage temperature (with battery) | -20 °C to +45 °C |
| Ingress Protection Rating | IP65 |
| Battery charge temperature | 0 °C to +45 °C |
| Battery discharge temperature | -20 °C to +60 °C |
| Battery storage temperature | -20 °C to +45 °C for 1 month -20 °C to +35 °C for 6 months |

FEATURES

| | |
|-----------|--|
| Sensors | Accelerometer |
| Scenarios | Green Driving, Over Speeding detection, Jamming detection, GNSS Fuel Counter, Excessive Idling detection, Unplug detection, Towing detection, Crash detection, Auto Geofence, Manual Geofence, Trip² |

| | |
|-----------------------------------|--|
| Sleep modes | GPS Sleep, Online Deep Sleep, Deep Sleep, Ultra Deep Sleep³ |
| Configuration and firmware update | FOTA Web⁴, Teltonika Configurator⁵ (USB, Bluetooth) |
| SMS | Configuration, Events, Debug |
| GPRS commands | Configuration, Debug |
| Time Synchronization | GPS, NITZ, NTP |
| Ignition detection | Accelerometer, External Power Voltage |

³wiki.teltonika-gps.com/view/FMM880_Sleep_modes#Deep_Sleep_mode

⁴wiki.teltonika-gps.com/view/FOTA_WEB

⁵wiki.teltonika-gps.com/view/Teltonika_Configurator

²wiki.teltonika-gps.com/view/FMM880_Features_settings

SAFETY INFORMATION

This message contains information on how to operate FMM003 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

- The device uses SELV limited power source. The nominal voltage is +12 V DC. The allowed voltage range is +10...+30 V DC.
- To avoid mechanical damage, it is advised to transport the device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible. They show the status of device operation.
- Before unmounting the device from vehicle, ignition **MUST be OFF**.



Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, **DO NOT** touch the device before unplugging the power supply.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



Please consult representatives of your vehicle model regarding OBDII location on your vehicle. In case you are not sure about proper connection, please consult qualified personnel.



The programming must be performed using a PC with autonomic power supply.



Installation and/or handling during a lightning storm is prohibited.



The device is susceptible to water and humidity.



Teltonika is not responsible for any harm caused by wrong cables used for connection between PC and FMM880



Battery should not be disposed of with general household waste. Bring damaged or worn-out batteries to your local recycling center or dispose them to battery recycle bin found in stores.

CERTIFICATION AND APPROVALS



This sign on the package means that it is necessary to read the User's Manual before you start using the device. Full User's Manual version can be found in our [Wiki](#)¹.

¹ wiki.teltonika-gps.com/view/FMM880



The **RoHS**¹ is a directive regulating the manufacture, import and distribution of Electronics and Electrical Equipment (EEE) within the EU, which bans from use 10 different hazardous materials (to date).

¹ wiki.teltonika-gps.com/view/FMM880_RoHS



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.

CHECK ALL CERTIFICATES

All newest certificates may be found in our [Wiki](#)².

² wiki.teltonika-gps.com/view/FMM880_Certification_%26_Approvals

WARRANTY

We guarantee our products 24-month warranty¹ period.

All batteries carry a 6-month warranty period.

Post-warranty repair service for products is not provided.

If a product stops operating within this specific warranty time, the product can be:

- Repaired
- Replaced with a new product
- Replaced with an equivalent repaired product fulfilling the same functionality
- Replaced with a different product fulfilling the same functionality in case of EOL for the original product

¹ Additional agreement for an extended warranty period can be agreed upon separately.

WARRANTY DISCLAIMER

- Customers are only allowed to return products as a result of the product being defective, due to order assembly or manufacturing fault.
- Products are intended to be used by personnel with training and experience.
- Warranty does not cover defects or malfunctions caused by accidents, misuse, abuse, catastrophes, improper maintenance or inadequate installation – not following operating instructions (including failure to heed warnings) or use with equipment with which it is not intended to be used.
- Warranty does not apply to any consequential damages.
- Warranty is not applicable for supplementary product equipment (i. e. PSU, power cables, antennas) unless the accessory is defective on arrival.
- [More information on what is RMA¹](#)

¹ wiki.teltonika-gps.com/view/RMA_guidelines