How to start with FMB devices and Beacons?

 $\underline{\text{Main Page}}$ > $\underline{\text{Frequently Asked Questions - FAQ}}$ > $\underline{\text{How to start with FMB devices and Beacons?}}$

Contents

- 1 Eye Devices ready to use
- 2 Beacon Configuration and data sending
 - <u>2.1 EYE APP Overview</u>
 - 2.2 Beacon configuration (Setting your tracking device for Beacon usage)
 - 2.2.1 Steps to follow according to the visual representation
 - 2.3 Beacon data parsing
- 3 Parsing of Beacon records
 - 3.1 Example Beacon Record
- 4 Parsing Beacon data from record
 - 4.1 Beacon Flags




Eye Devices ready to use

The easiest way to get started with beacons is to use the Teltonika's Eye Devices. All you need to do is just unbox them.

<u>Eye Beacons</u> are designed to make your wireless experience effortless, there is not need to make adjustments configuration, the devices are pre-configured and ON from factory, this ensures rapid deployment.

Devices work constantly and are ready to perform out of the box. Default basic Sensor settings are set to:

- Transmitting at 2 dBm power.
- Data advertising at 5 second intervals.
- Eddystone(for EYE Beacon) Eddystone and Sensors(for EYE Sensor) protocol

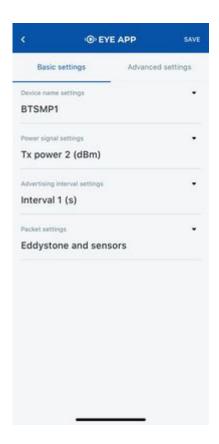

You can find detailed information about how to configure those parameters below:

Beacon Configuration and data sending

EYE APP Overview


Eye sensors are ready to use from factory, however, you can change your beacon parameters according to your needs. Eye App is Teltonika dedicated application for Eye sensor/beacon configuration.



- 1. Eye App first screen will show you available Eye Beacons/sensors reachable, press on you beacon to access next screen
- 2. Eye App second screen shows ID information and Firmware information, press on the icon to access beacon parameters
- 3. Eye App third screen allows you to change Beacon Name, TX power, Advertising interval, Packet settings.

Beacon configuration (Setting your tracking device for Beacon usage)

Below are short instructions which show how we recommend configuring the device to Enable the Beacon functionality for testing.

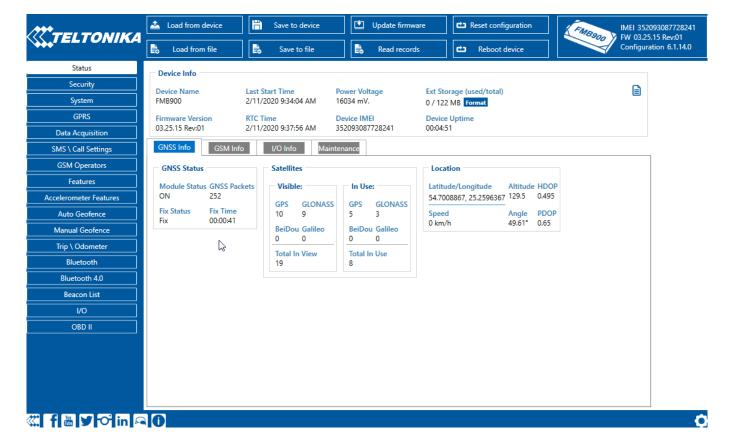


Steps to follow according to the visual representation

- 1. In System Settings Enable Codec8 Extended;
- 2. In <u>Bluetooth®</u> settings Enable Bluetooth®, set this setting as either "Enable (hidden)" or "Enable (visible)", otherwise Bluetooth® will be disabled;
- 3. In <u>Bluetooth® 4.0</u> settings, set Non Stop Scan to "Disable", configure "Update Frequency" and "Scan duration" as 30 seconds. These settings will bring the best results for BLE scanning with our device;
- 4. In <u>Beacon list</u> settings, configure Beacon Detection as "All" and Beacon Record as "Eventual". This will detect all surrounding Beacons and create Beacon records every 30 seconds.

Beacon data parsing

Shown how Beacon data is represented on Wialon platform.

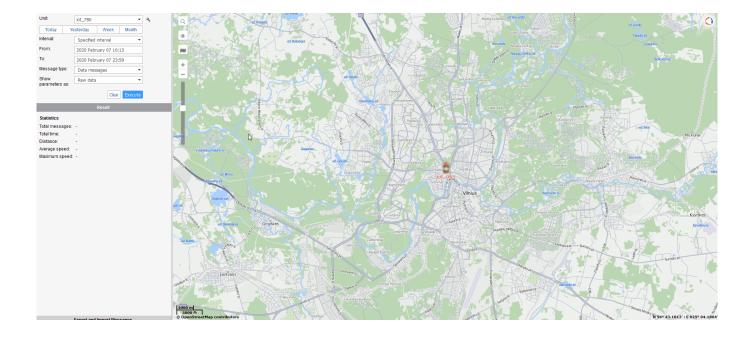

Parsing of Beacon records

Beacon records are sent as separate Records with Event I/O ID 385 and also include I/O element 385 (Codec8 Extended has to be used because the I/O element 385 uses Variable size IO element).

Received data in hexadecimal stream:

000000000000000068E01000001701F9B3FA9000F0E5732209AB45000680029040000018100010 00000000000000001018100A911214B5C049F515341

FCA950D2C264414E1000050006BA21E2C56DB5DFFB48D2B060D0F5A71096E000000000A92131A 74BB76A79423196C916CFB9FAED45002D00159F0700112

233445566778899ABCDE0810047AE0BE80015210F86676BEC91420A94409110029AFAC415B31A 0AA101DE9C18E92CA5AA689697365434663222BA21EBBB

DE835D7F4965B5F06C2EDCB3A55300010080A501736B79686F73742E646B000010000128AD010 00030CB

Example Beacon Record

AVL Data Packet

AVL Data Packet Part

Zero Bytes Data Field Length Codec ID

Number of Data 1 (Number of Total Records)

HEX Code Part00 00 00 00
00 00 00 D6
8E (Codec8 Extended)

01

	Timestamp	00 00 01 70 1F 9B 3F A9 (GMT: Friday, 07 February 2020 12:23:53.001)		
AVL Data	Priority	00		
	Longitude	0F 0E 57 32		
	Latitude	20 9A B4 50		
	Altitude	00 68		
	Angle	00 29		
	Satellites	04		
	Speed	00 00		
	Event IO ID	01 81 (385)		
	N of Total ID	00 01		
	N1 of One Byte IO	00 00		
	N2 of Two Bytes IO	00 00		
	N4 of Four Bytes IO	00 00		
	N8 of Eight Bytes IO	00 00		
	NX of X Bytes IO	00 01		
	N'th IO ID - AVL ID.	01 81 (385)		
	Length of Variable Length IO	00 A9		
		11214B5C049F515341FCA950D2C264414E1000050006BA21E 2C56DB5		
	Value of Variable Length IO	DFFB48D2B060D0F5A71096E000000000A92131A74BB76A794 23196C916CFB9FAED45002D00159F070011223344556677889 9ABCDE081004		
		7AE0BE80015210F86676BEC91420A94409110029AFAC415B3 1A0AA101DE9C18E92CA5AA689697365434663222BA21EBBB DE835D7F4965B5		
		F06C2EDCB3A55300010080A501736B79686F73742E646B000 010000128AD		
	Number of Data 2 (Number of Total Records)	01		
	CRC-16	00 00 30 CB		

Parsing Beacon data from record

Beacon data

Unparsed Beacon data

11214B5C049F515341FCA950D2C264414E1000050006BA<mark>21E2C56DB5</mark>

DFFB48D2B060D0F5A71096E0000000000A92131A74BB76A79423196C916CFB9FAED45002D00159F0700112233445566778899ABCDE081004
7AE0BE80015210F86676BEC91420A94409110029AFAC415B31A0AA101DE9C18E92CA5AA689697365434663222BA21EBBBDE835D7F4965B5
F06C2EDCB3A55300010080A501736B79686F73742E646B000010000128AD

Beacon Flags

The below table represents possible Beacon flags. Supported Beacon protocols are iBeacon and Eddystone.

Flags				
21	iBeacon with RSSI			
23	iBeacon with RSSI, Battery Voltage			
27	iBeacon with RSSi, Battery Voltage, Temperature			
01	Eddystone with RSSI			

Eddystone with RSSI, 03 Battery Voltage Eddystone with RSSi, **07** Battery Voltage, Temperature

NOTE! Standard iBeacon protocol does not support Battery voltage or temperature sending.

Parsed Beacon data						
Parsed Beacon data part	HEX Code Part					
Data part (First half byte - current data part, Second half byte - total number of data parts)	11					
BLE beacon flags #1 21 - iBeacon, RSSI is sent	21					
BLE Beacon UUID #1	4B5C049F515341FCA950D2C264414E10					
BLE Beacon Major #1	0005					
BLE Beacon Minor #1	0006					
BLE Beacon RSSI #1	BA - Signed 2's Complement -70 dBm					
BLE beacon flags #2 21 - iBeacon, RSSI is sent	21					
BLE Beacon UUID #2	E2C56DB5DFFB48D2B060D0F5A71096E0					
BLE Beacon Major #2	0000					
BLE Beacon Minor #2	0000					
BLE Beacon RSSI #2	A9 - Signed 2's Complement -87 dBm					
BLE beacon flags #3 21 - iBeacon, RSSI is sent	21					
BLE Beacon UUID #3	31A74BB76A79423196C916CFB9FAED45					
BLE Beacon Major #3	002D					
BLE Beacon Minor #3	0015					
BLE Beacon RSSI #3	9F - Signed 2's Complement -97 dBm					
BLE beacon flags #4 07 - Eddystone, Battery Voltage, Temperature, RSSI is sent	07					
BLE Beacon Namespace #4	00112233445566778899					
BLE Beacon Instance ID #4	ABCDE0810047					
BLE Beacon RSSI #4	AE - Signed 2's Complement -82 dBm					
BLE Beacon Battery Voltage #4	0BE8 - 3048 mV					
BLE Beacon Temperature #4	0015 - 21°C					
BLE beacon flags #5 21 - iBeacon, RSSI is sent	21					
BLE Beacon UUID #5	0F86676BEC91420A94409110029AFAC4					
BLE Beacon Major #5	15B3					
BLE Beacon Minor #5	1A0A					
BLE Beacon RSSI #5	A1 - Signed 2's Complement -95 dBm					
BLE beacon flags #6 01 - Eddystone, RSSI is sent	01					
BLE Beacon Namespace #6	DE9C18E92CA5AA689697					
BLE Beacon Instance ID #6	365434663222					
BLE Beacon RSSI #6	BA - Signed 2's Complement -70 dBm					
BLE beacon flags #7	21					